

READ BEFORE FIRST USE

NINJA sipperfect™ TRAVEL MUG

USE AND CARE GUIDE

THE PERFECT SIP EVERY TIME.

Ninja SipPerfect™ Travel Mug is a revolutionary drinkware solution designed specifically for hot beverages, allowing you to start sipping your favorite hot beverages sooner and enjoy them at the perfect temperature for longer.

TIPS FOR MAXIMIZING YOUR TRAVEL MUG'S PERFORMANCE

- For best results, fully fill your travel mug directly from your coffee maker or coffee carafe.
- Make sure to close the lid after each sip to minimize heat loss.
- Cool your travel mug down between refills. Rinse and fill with ice cold water, let it sit for 3 minutes, and rinse again.
- Allow your travel mug to dry upright for at least 1 hour after washing.

NOTE: When using boiling water for tea, it will take longer to get to the drinkable temperature than when drinking coffee. Add ice cubes to expedite cooldown process.

HEATSTORE™ TECHNOLOGY

HeatStore Temperature Control Technology absorbs heat to bring scorching-hot drinks down to the perfect sipping temperature in minutes and maintains that temperature for hours.

HeatStore Temperature Control Technology slowly releases the heat back into your drink, enabling you to sip at the perfect temperature zone for longer.

NOTE: To enhance heat retention, preheat the travel mug by filling it with hot water. Let sit for a few minutes, discard, then fill with your hot drink of choice.

LID DISASSEMBLY

1. With the lid upside down, rotate the lock counterclockwise to unlock the rocker cap.



2. While in open position, remove rocker cap from lid.



3. Lock latch can be lifted and held open to clean underneath.



Reverse steps above for reassembly.

CARE INSTRUCTIONS

Product is dishwasher safe; however, hand-washing is recommended. Wash before initial use. After each use, wash all parts in warm, soapy water. Use only mild dish soap for cleaning—no bleach. For thorough cleaning, remove the gasket from the lid and disassemble all components; clean and dry before reassembling. Ensure all components are completely dry and store the bottle upright with the lid removed.

WARRANTY

We guarantee every Ninja® travel mug with a 5-year limited warranty against manufacturer defects. For details visit ninjakitchen.com/support

⚠ CAUTION ⚠

Use caution when filled with hot liquids to prevent scalding and burns.

- 1 ALWAYS** test temperature of contents before consuming.
- 2 DO NOT** use container for storage of food and perishables. Contents should not be left in container for longer than 24 hours. However, the rate at which contents spoil depends on several factors. Certain contents that include dairy or tomato may start to spoil sooner, for example.
- 3 DO NOT** overfill. Leave space at the top to prevent leakage and overflow.
- 4** Check periodically to make sure any gasket (flexible band around inside of lid) is present and properly positioned to prevent contents from leaking. Missing, worn, or misaligned gaskets may cause product to leak.

- 5 DO NOT** use to store or carry dry ice. This may cause lid/stopper and contents to eject forcefully, which may cause leaking or personal injury.
- 6 DO NOT** use product in microwave, on stovetop, or in any type of oven. Fire and personal injury can occur.
- 7 DO NOT** place any component of the product in the freezer as this can damage the vacuum insulation or heat technology.

SharkNinja Operating LLC
US: Needham, MA 02494
1-855-427-5130 | ninjakitchen.com

NINJA is a trademark of SharkNinja Operating LLC.

HEATSTORE and NINJA SIPPERFECT are trademarks of SharkNinja Operating LLC.

This product may be covered by one or more U.S. patents. See sharkninja.com/patents for more information.

© 2024 SharkNinja Operating LLC.

PRINTED IN CHINA