

Ignition Checklist

Grill lid must be open to ignite the burners


CHECK FOR DAMAGE



Ensure the igniter (thin white pin) connected to the pilot burner on the right side of the unit does not look bent or damaged.

NOTE: Grill grates and flame tamers need to be removed to access it.


CHECK CONNECTORS UNDER CONTROL PANEL

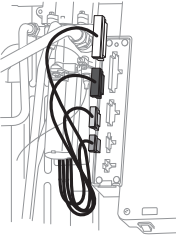

Ensure the white, black, blue, and green connectors located in the black box under the control panel on the right side of the unit are securely plugged in.

NOTE: Always unplug the grill, turn the propane off, turn the dial to OFF when checking connectors.


CHECK BLACK CONNECTORS UNDER THE RIGHT-SIDE TABLE

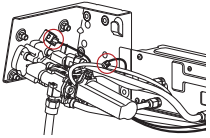

Ensure the two black connectors located under the right-side table are securely plugged in.

NOTE: Always unplug the grill, turn the propane off, turn the dial to OFF when checking connectors.


CHECK IGNITION MODULE CONNECTORS

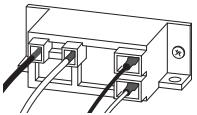

Under the right-side table, locate the ignition module. Push on all four wires to ensure they are secure.


NOTE: Always unplug the grill, turn the propane off, turn the dial to OFF when checking connectors.

CHECK GAS SUPPLY

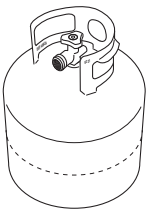

Ensure gas tank regulator is properly installed, being careful not to cross-thread the connector. Check that your valve is open and your tank is not empty. Inspect for any kinks, bends, or damage in the regulator hose. Lastly, confirm that there are no gas leaks present through a 'soapy-water test'.

PLUG GRILL IN

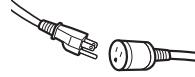

Ensure Ninja FlexFlame is plugged in using a 3-prong grounded extension cord, rated for outdoor use and the outlet is functioning properly.

TURN THE DIAL




Push in BURNER dial and turn to IGNITE PILOT. Be sure to hold in for up to 10 seconds to ensure that the thermopile has time to heat up. Be patient - it may feel like a long time.

CHECK PILOT BURNER FLAME



Once the pilot burner is ignited, you will see a blue flame through the peep hole on the right side of the unit. After the pilot burner is lit, turn the dial to select a function and ignite the main burners. If the flame is not lit, repeat prior step.


CHECK MAIN BURNER FLAMES

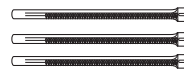

Look at the 3 peep holes on the left side of the grill for main burner flames.

NOTE: The main burners will only ignite once the pilot burner has successfully ignited.

CLEAN GRILL

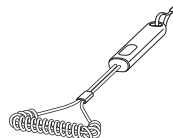

Ensure the burners, nozzles, the igniter and thermopile tips are clean of any build up or food residue. Keep your grill clean after every use to ensure optimal performance. If burners are clogged, they can be cleaned with a wire brush.

NOTE: The igniter (thin white pin) and thermopile (thin gold pin) are connected to the pilot burner on the right side of the unit. Grill grates and flame tamers need to be removed to access them.