

NINJA®

WARRIOR™

NJ200

OWNER'S GUIDE



IMPORTANT SAFETY INSTRUCTIONS

 
For Household Use Only

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR NINJA® WARRIOR™.

POLARIZED PLUG

WARNING: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. **DO NOT modify the plug in any way.**

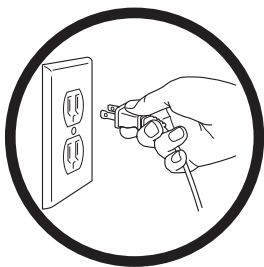

1. This appliance should not be used by children and care should be taken when used near children.
2. To protect against electric shock, **DO NOT** immerse cord, plug or any part of the main unit in water or any other liquids.
3. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces including the stove.
4. **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. Return the appliance to EURO-PRO Operating LLC for examination, repair or adjustment.
5. Unplug appliance from outlet when not in use, before putting on or removing parts and before cleaning.
6. **DO NOT** place on or near a hot gas or electric burner.
7. The use of accessory attachments, not sold or recommended by EURO-PRO Operating LLC may cause fire, electrical shock or risk of personal injury.
8. Extreme caution must be used when moving an appliance containing hot food, water or other liquids.
9. When mixing liquids, especially hot liquids, use the splash guard or make small quantities at a time to reduce spillage, spattering and possibility of injury from burning.
10. Use this appliance on a stable work surface away from water.
11. **DO NOT** remove the power head before the chopping blades have stopped turning.
12. **CAUTION!** Chopping blades are sharp, handle with care. When handling the chopping blades, always hold by the shaft.



13. **DO NOT attempt to sharpen blades.**
14. **DO NOT** expose containers to extreme temperature changes.
15. **DO NOT** use container if it is cracked or chipped.
16. **DO NOT** use the appliance if chopping blades are bent or damaged.
17. Avoid contact with moving parts at all times. Keep hands, hair, clothing as well as spatulas and other utensils away from moving/cutting blades and containers during operation to prevent risk of severe personal injury and/or damage to the appliance. A scraper may be used but must be used only when the appliance is not running.
18. Immediately release the On/Off pulse button on the power head in the event that the appliance malfunctions during use.
19. **DO NOT** use outdoors.
20. **DO NOT** use appliance for other than intended use.
21. **DO NOT** operate the appliance for more than 2 minutes.
22. Make sure that the gear box is securely attached to the processor bowl before operating the appliance.
23. Make sure that the power head is securely attached to the gear box or the blending shaft when using the blending cup or the processor bowl.
24. To reduce the risk of injury, **NEVER** place the chopping blades on the gear box and power head without first putting the processor bowl properly in place.
25. The maximum rating is based on the use of the chopping blade. Other recommended attachments may draw significantly less power or current.
26. **DO NOT** operate the appliance empty.
27. If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 10 minutes before using again.

NOTE: This unit has a short power supply cord to reduce the risk resulting from becoming entangled in or tripping over a long cord. **DO NOT USE AN EXTENSION CORD WITH THIS PRODUCT.**

SAVE THESE INSTRUCTIONS

The Ninja® Warrior™ is equipped with a patent pending tri-blade system that can effortlessly blend ice, fruits and vegetables into delicious, healthy smoothies. The Ninja® Warrior™ features portable power options so you can blend in your own containers or activate the 40 oz. processing bowl for even chopping! For best results, be sure to carefully read all the instructions contained in the manual before using this appliance.

350 Watt Power Head

The 350 watt power head operates on 120V., 60Hz. electrical power. **NEVER** allow the power head to become wet when plugged into an electrical outlet.

- ⚠ WARNING:** The power head should never be immersed in water or any other liquid.
- ⚠ CAUTION:** Make sure that the power head is unplugged from the electrical outlet and that the blades have stopped turning before attaching or removing any accessory.
- ⚠ CAUTION:** **Blades are sharp! Use extreme caution when handling the blades. Always hold them by the shaft. Do not attempt to sharpen blades.**
- ⚠ IMPORTANT:** **Never run the appliance empty.**

This manual covers model:
NJ200 30

TECHNICAL SPECIFICATIONS


Voltage:	120V., 60Hz.
Power:	350 Watts
Processor Bowl:	40 ounces (5 cups)
Blending Cup:	32 ounces (4 cups)



Contents

Thank you for
purchasing
the Ninja®
Warrior™.


Getting Started	6
Using the Ninja® Warrior™ Blending Shaft Attachment	7
Using the Ninja® Warrior™ Processing Bowl	8
Cleaning and Maintenance	9
Troubleshooting Guide	9
Warranty.....	10
Registration.....	11

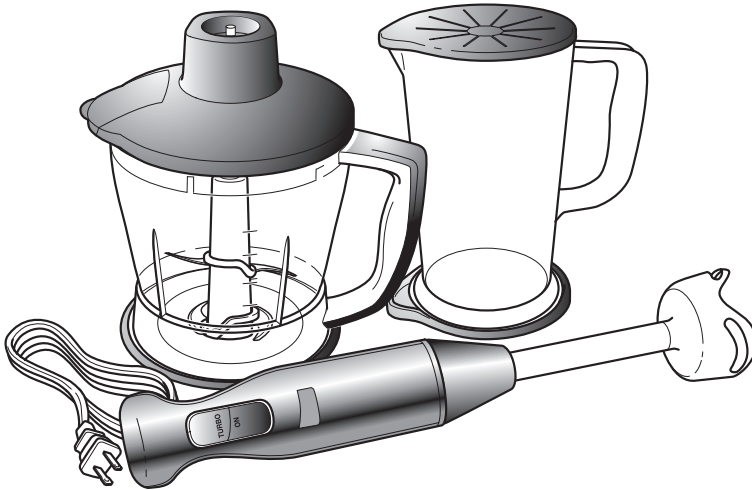 

FEATURES:

- **Patent Pending Tri-Blade System - Crushes ice to snow!**
- **40 oz. Processor Bowl - BPA Free**
- **32 oz. Blending Cup - BPA Free**
- **Stainless steel blending shaft**
- **Extra long cord for portable power**
- **Dishwasher safe parts**

 Getting Started

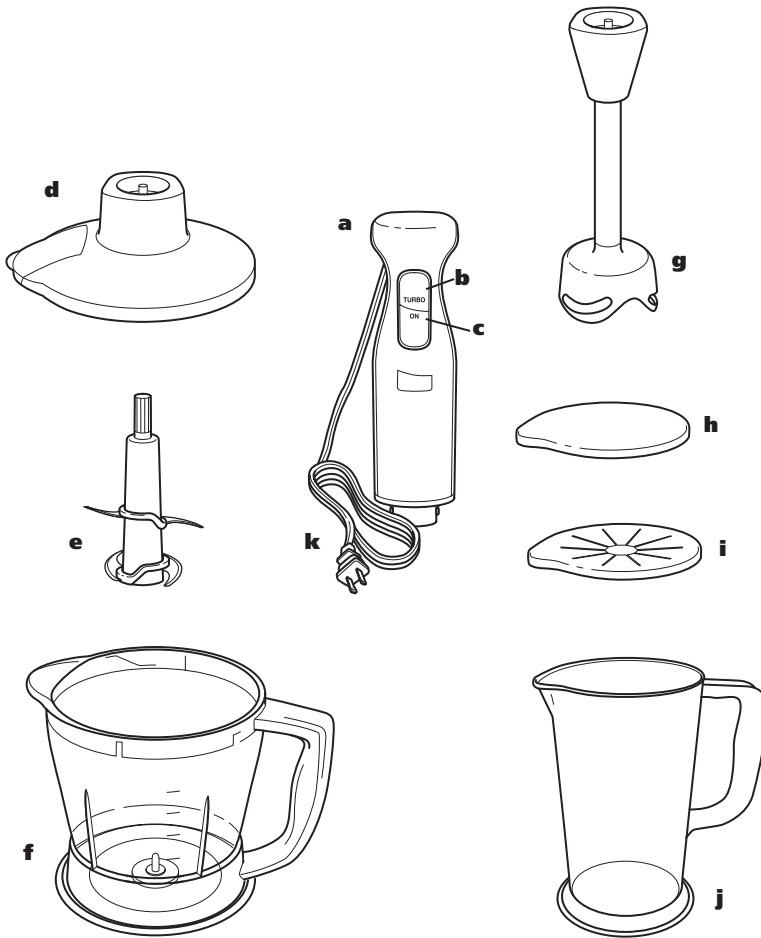


- a** Power Head
- b** Turbo Button
- c** Power Button
- d** Gear Box (for 40 oz. processor bowl)
- e** Ninja® 4-Blade (for 40 oz. processor bowl)

- f** 40 oz. Processor Bowl with Non-Slip Base
- g** Blending Shaft (for 32 oz., Blending Cup)
- h** Storage Lid / Non-Slip Base (for 32 oz., Blending Cup)
- i** Splash Guard (for 32 oz., Blending Cup)
- j** 32 oz. Blending Cup
- k** Power Cord



Using the Ninja® Warrior™ Blending Shaft Attachment

 Use caution when blending in a saucepan.


 For best results move the blending shaft up and down at an angle while blending.



Fig. 1

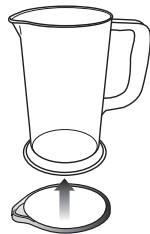 


Fig. 2

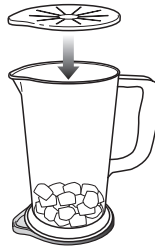 


Fig. 3

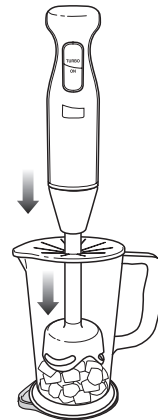 


Fig. 4

⚠ CAUTION: Blades are sharp! Use extreme caution when handling the blending shaft.

⚠ IMPORTANT: Do not use the blending shaft in the processing bowl.


- 1 To attach the blending shaft to the power head, place the power head onto the blending shaft and rotate to match the arrows to lock in place. (Fig. 1)
- 2 Plug the electrical cord into an wall outlet.
- 3 Attach the storage lid/non-slip base to the bottom of the blending cup. (Fig. 2)
- 4 Place the food into the blending cup and then place the splash guard on the blending cup. Make sure that the splash guard is firmly attached to the top of the blending cup. (Fig. 3)
- 5 Insert the blending shaft through the opening on the splash guard so that the blades are resting on top of the ingredients. (Fig. 4)
- 6 Press and hold the power button. The blending shaft will continue to blend

as long as the power button is pressed. Move blending shaft up and down at an angle to combine ingredients.

- 7 Always release the power button before removing the blending shaft from the food, especially when blending hot food or liquids. Always hold the power head with your hand and never leave the appliance unattended while in use.
- NOTE:** It is not recommended to operate the appliance continuously for more than 2 minutes at a time.
- 8 To stop the appliance, release the power button.
 - 9 If you need a stronger burst of power, press the turbo button.
 - 10 When finished blending, unplug the appliance from the outlet and remove the blender shaft from the power head by turning the power head clockwise.

⚠ CAUTION: Never remove the blending shaft from the container while the unit is plugged in.

Using the Ninja® Warrior™ Processing Bowl

 In order to obtain a better quality of chopping, operate the unit by using a “Pulse” method.

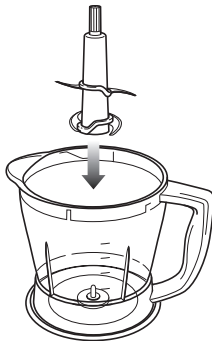 


Fig. 5

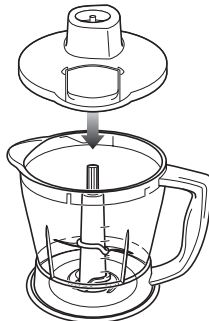 


Fig. 6

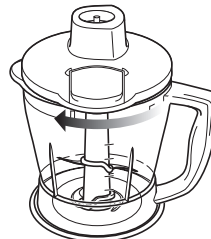 


Fig. 7

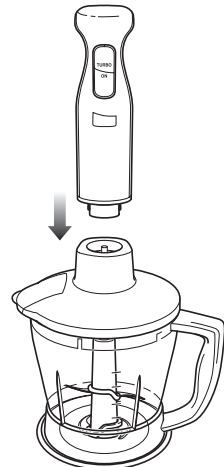 


Fig. 8

- ⚠ CAUTION:** Blades are sharp! Use extreme caution when handling the blades. Always hold the blade assembly by the shaft.
- ⚠ IMPORTANT:** Do not use the blending shaft in the processing bowl.
- ⚠ IMPORTANT:** Never run the appliance empty.
- 1** Place the processor bowl on a clean, dry, level surface.
- 2** Holding the blade by the shaft, place it onto the spindle pin inside the processor bowl. (**Fig. 5**)
- ⚠ IMPORTANT:** Place the blade inside the container carefully as blades are sharp.
- ⚠ WARNING: DO NOT** try to place the blade onto the power head and then into the processor bowl.
- 3** Add the ingredients to the processor bowl. Make sure your total of ingredients don't exceed the highest measured marking line on the side of the container.
- ⚠ IMPORTANT:** Never add ingredients into the processor bowl before placing the blades in first.
- 4** Place the gear box into position on top of the processor bowl. (**Fig. 6**) Rotate to lock. (**Fig. 7**)
- 5** Place the power head on top of the gear box and turn it counter clockwise to match the arrows and lock it into place. (**Fig. 8**)
- 6** For best results when chopping, pulse the power button.
- 7** To remove the power head, turn it clockwise to unlock. Rotate the gear box to unlock. Remove the gear box and the chopping blades carefully. Then remove the ingredients from the bowl.
- ⚠ IMPORTANT:** It is not recommended to operate the appliance continuously for more than 2 minutes at a time.

Cleaning and Maintenance

⚠ CAUTION: Make sure that the power head is unplugged from power source before inserting or removing any attachment and before cleaning.

	Power Head	Blending Shaft	32 oz. Blending Cup	Splash Guard	Storage Lid	40 oz. Bowl	Blade Set	Gear Box
Dishwasher safe		✓ top rack	✓	✓ top rack	✓ top rack	✓	✓ top rack	
Wipe clean with a damp cloth	✓							✓

Troubleshooting Guide

PROBLEMS	POSSIBLE REASONS & SOLUTIONS
Motor Doesn't Start or Blades Don't Rotate.	<p>The unit has overheated. Unplug and wait approximately 10 minutes before using again.</p> <p>Make sure the gear box is securely on the processing bowl.</p> <p>Make sure the power head is securely placed on gear box or the blending shaft.</p> <p>Check that the plug is securely inserted into the electrical outlet.</p> <p>Check fuse or breaker. Replace fuse/reset breaker.</p>
Food is Unevenly Chopped.	<p>Either you are chopping too much food at one time, or the pieces are too large. Try cutting the food into smaller pieces of even size or processing smaller amounts per batch.</p>
Food is Chopped Too Fine or is Too Watery.	<p>The food has been over processed. Use quick pulses or process for shorter time. Let blades stop completely between pulses.</p>
You Cannot Achieve Snow From Solid Ice.	<p>Do not use ice that has been sitting out or has started to melt.</p>

Please call EURO-PRO Customer Service for any other servicing at 1 (800) 798-7398.

To purchase replacement parts, please visit our website: www.ninjakitchen.com or contact customer service: 1-800-798-7398.



ONE (1) YEAR LIMITED WARRANTY

EURO-PRO Operating LLC warrants this product to be free from material defects and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

The liability of **EURO-PRO Operating LLC** is limited solely to the cost of the repair or replacement of the unit at our option. This Limited Warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This Limited Warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This Limited Warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alteration to the product or any of its parts, which have been performed by a repair person not authorized by **EURO-PRO Operating LLC**.

If your appliance fails to operate properly while in use under normal household conditions within the Limited Warranty period, you may return the complete appliance and accessories with proof of purchase and date, freight prepaid. For Customer Service support, call 1-800-798-7398 or visit our website www.ninjakitchen.com.

If the appliance is found by **EURO-PRO Operating LLC** to be defective, in **EURO-PRO Operating LLC's** sole discretion, we will repair or replace it free of charge. Proof of purchase date and check made payable to **EURO-PRO Operating LLC** in the amount of \$11.95 to cover the cost of return shipping and handling must be included.*

This Limited Warranty is extended to the original purchaser of the unit and excludes all other legal, implied and/or conventional warranties. The responsibility of **EURO-PRO Operating LLC** if any, is limited to the specific obligations expressly assumed by it under the terms of this Limited Warranty. **In no event is EURO-PRO Operating LLC** liable for incidental or consequential damages to anyone of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or from province to province.

***IMPORTANT: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with the item. We recommend you insure the package (as damage in shipping is not covered by your Limited Warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**



OWNERSHIP REGISTRATION CARD FOR CANADIAN CONSUMERS ONLY

Please fill out and mail the product registration card within ten (10) days of purchase. The registration will enable us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

Mail to the following address:

- EURO-PRO Operating LLC
4400 Bois Franc, Ville St.Laurent, Québec, Canada H4S 1A7

Owner's Name:

Address:

City:

Province:

Postal Code:

<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------

Date Purchased:

Name of Store:

Appliance Model:

NINJA
TM

Euro-Pro Operating LLC
US: Newton, MA 02459
CAN: Ville St-Laurent, QC H4S 1A7

1-800-798-7398

www.ninjakitchen.com

Copyright © 2011 Euro-Pro Operating LLC

Printed in China

Illustrations may differ from actual product.

NJ200.E.110112