

CAUTION

Your Ninja™ Foodi™ NeverDull™ Knife Sharpener is designed to securely hold your Ninja™ knife in place while sharpening. Complete the steps below to verify your Ninja™ knife is secured in the sharpening slot before sharpening.

- 1 After following the enclosed instructions on inserting a Ninja™ knife, **gently pull straight up on the inserted knife.**
NOTE: The knife should be secured and not easily removed from the sharpening slot.
- 2 If the knife is easily removed, fully remove the knife from the sharpener and safely set aside.
- 3 With no knife inserted, **slowly press the release button down fully three times.**
- 4 Reinsert the knife following the enclosed instructions and gently pull straight up on the inserted knife. The knife should now be secured in the sharpening slot.
- 5 If the knife is still not secured, repeat steps above.
- 6 Once the knife is secured, proceed with the sharpening steps in the enclosed instructions.