
NINJA MASTER PREP® WHAT'S INCLUDED

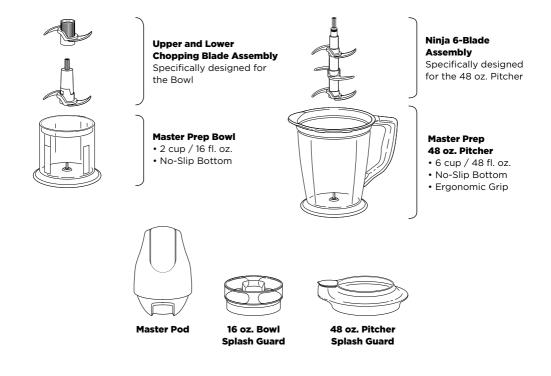

CLEANING

Dishwasher: The pitcher, bowl, splash guards, and blade assemblies are all dishwasher safe. It is recommended that the blade assemblies be placed on the top rack. Ensure the blade assemblies are removed from the pitcher and the bowl before placing in the dishwasher.

Hand Washing: Wash the pitcher, bowl, splash guards, and blade assemblies in warm, soapy water. When washing the blade assemblies, use a dishwashing utensil with a handle to avoid direct hand contact with blades. Handle the blade assemblies with care to avoid contact with sharp edges. Rinse and air-dry thoroughly.

WARNING: Handle the blade assemblies with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration. Please make sure to read the enclosed Ninja Owner's Guide prior to using your unit.

NINJA MASTER PREP® QUICK ASSEMBLY

16 oz. BOWL



1. Place the Master Prep Professional Bowl on a clean, dry, level surface.

Holding the Lower Chopping Blade Assembly by the shaft, place it over the spindle pin inside the bowl.

Carefully insert the Upper Chopping Blade Assembly over the Lower Chopping Blade Assembly, rotating it until it locks onto the Lower Chopping Blade Assembly. **2.** Place the splash guard on the bowl.





Place the Master Pod on top of the splash guard, making sure it is securely in place.

NOTE: Do not attempt to operate the appliance without the safety splash guard in place.

Hold pres butt

Hold the bowl firmly while pressing the On/Off pulse button to ensure the unit stays in place.

48 oz. PITCHER



1. Place the Master Prep Professional Pitcher on a clean, dry, level surface.

Holding the Ninja 6-Blade Assembly by the shaft, place it onto the spindle pin inside the pitcher.



2. Place the splash guard on the pitcher.



Place the Master Pod on top of the splash guard, making sure it is securely in place.

NOTE: Do not attempt to operate the appliance without the safety splash guard in place.

Hold the pitcher firmly while pressing the On/Off pulse button to ensure the unit stays in place.



WARNING: The blade assemblies are sharp and not locked in place. Make sure to remove the Chopping Blade Assembly, holding it by the shaft, before emptying contents of bowl. If using the pour spout on the pitcher splash guard, ensure the splash guard is fully secured to the pitcher before pouring. If pouring with the pitcher splash guard removed from the pitcher, carefully remove the blade assembly first, holding it by the shaft. Failure to do so will result in a risk of laceration. Refer to the Ninja Owner's Guide for additional information.