

Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.

NINJA

DUALBREW

GROUND & PODS

SPECIALTY COFFEE SYSTEM

QUICK START GUIDE

BEFORE YOUR FIRST BREW


To prime your brewer:

1. Plug it into an outlet and turn it on.
2. Fill the water reservoir to the Full line with fresh water and place it on the base.
3. Remove the Ninja Pod Adapter and slide the Sliding Lid into the closed position (refer to steps on page 3).
4. Place the empty carafe under the brew basket and run a Full Carafe, Classic brew.

Once the brew is complete, discard the water and you're ready to go.

If you live in a high-altitude area, running a calibration brew is required. Not running a high-altitude calibration brew in a high-altitude area will result in excessive steaming during brewing. Refer to page 7 of the Owner's Guide for instructions on running a high-altitude calibration brew.

HERE'S WHAT'S IN THE BOX

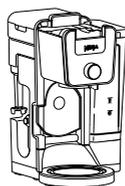

NINJA DUALBREW



NINJA POD ADAPTER

Comes fully installed in the brewer. Always ensure to insert it over the brew basket when brewing pods.



BREW BASKET

Comes fully installed in the brewer. It must always be inserted when brewing pods or grounds.



PERMANENT FILTER



FROTHER WHISK

Included in the box. Must be assembled on the brewer.



NINJA SMART SCOOP™

Use this to measure coffee grounds.




70 OZ. REMOVABLE WATER RESERVOIR



14 CUP GLASS CARAFE

FILLING THE WATER RESERVOIR

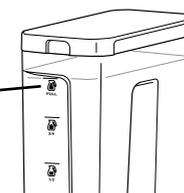


FILL TO THE FULL LINE

Fill up to, but do not exceed, the Full line.

LOCKING AND REMOVING THE NINJA POD ADAPTER

The Ninja DualBrew Specialty Coffee System comes with a unique Ninja Pod Adapter already installed on the brewer. Always ensure the adapter is installed over the brew basket.

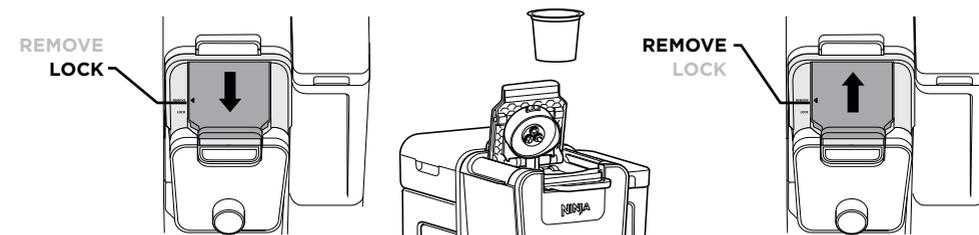


1. Once the adapter is installed in the brewer, make sure the position indicator on the left side of the adapter is aligned with LOCK by pulling the handle toward you. Then, lift to open the handle, insert a pod, firmly push down on the handle to pierce the pod, and begin programming your brew.
2. To uninstall the adapter, remove the used pod and close the handle. Push the handle away from you so the position indicator is in the REMOVE position. Then, using the edges on the left and right, lift the adapter out of the brewer.

NOTE: The Ninja Pod Adapter is compatible only with K-Cup pods. It is not compatible with reusable K-Cup filters. If using ground coffee, use the Grounds mode with a paper or permanent filter (sold separately) to brew a single-serve size.

SLIDING LID

The sliding lid is used only when brewing loose coffee grounds. To use it, first remove the Ninja Pod Adapter. Then, using the handle on top of the brewer, slide the lid toward you until it firmly clicks into place.

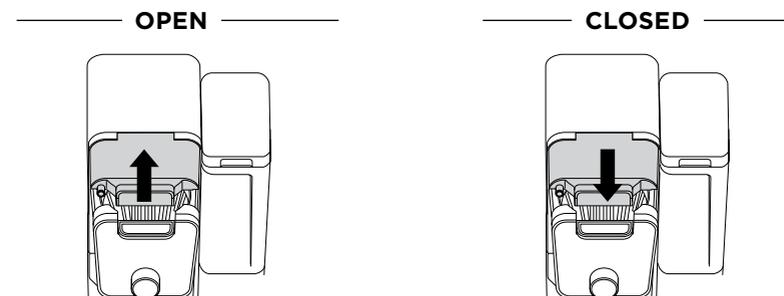

CUP, MUG, OR CARAFE



CUP

Pull down the cup platform to set a mug on it.



TRAVEL MUG & XL SIZES


Place an XL Cup, Travel Mug, or XL Tumbler on the base of the brewer.



CARAFE

Place the carafe on the Intelligent Warming Plate.

INTELLIGENT WARMING PLATE

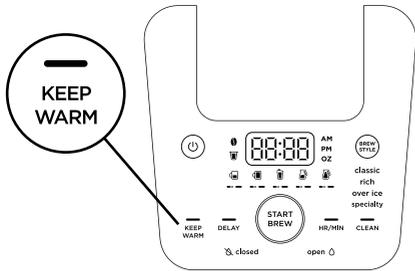

The Intelligent Warming Plate will automatically turn on while brewing a Classic or Rich brew on any Carafe size and remain on for 2 hours. To adjust how long the Intelligent Warming Plate remains on (up to 4 hours), refer to the Owner's Guide.


When the Intelligent Warming Plate is on, it can be turned off manually by pressing KEEP WARM.

It can be turned on manually by pressing KEEP WARM while a Classic or Rich brew and any Carafe size is selected in Grounds mode.

IMPORTANT: The light on the base of the brewer will illuminate only when the warming plate is hot and will remain illuminated until the plate has cooled down.

NINJA SMART SCOOP™

The **Ninja Smart Scoop** is used for accurately measuring coffee grounds. The numbers beside the icons show the number of level scoops recommended for each brew size.

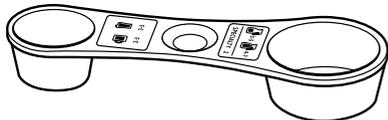

IMPORTANT: Always measure with level scoops of a medium grind size. Use fewer scoops when brewing decaf coffee. **DO NOT** use a paper filter in conjunction with a permanent filter.

SERVING SIZE	NINJA SMART SCOOP
	GROUND COFFEE
	2-3 small scoops
	3-5 small scoops
	3-5 big scoops
	4-7 big scoops

BREW BASKET AND NINJA POD ADAPTER ASSEMBLY


BREW BASKET MUST BE INSERTED WHEN USING GROUNDS OR PODS.



GROUNDS



BREW BASKET

Must always be inserted when brewing pods or grounds.

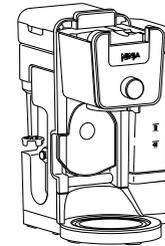

INSERT FILTER


Insert the permanent filter into the brew basket. If using paper filters, fold the #4 paper cone filter along the seams, open the top fully, then insert filter firmly into the brew basket.

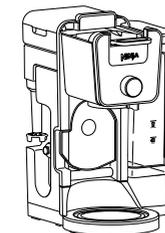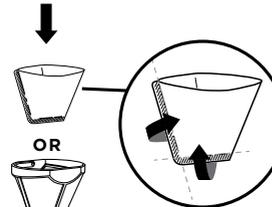

PODS


BREW BASKET

Must always be inserted when brewing pods or grounds. Do not insert a filter.

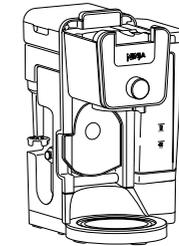

NINJA POD ADAPTER



Ensure adapter is in the REMOVE position before installing. Always insert over the brew basket when brewing pods.

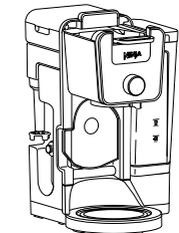

1 CHOOSE A METHOD




GROUNDS

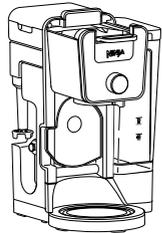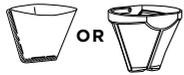

Ensure the brew basket is installed and the Ninja Pod Adapter is removed. Then, insert the permanent filter or a paper filter in the basket (refer to steps on pages 3 and 5).



Use the Ninja Smart Scoop™ to add your desired amount of coffee grounds (refer to the Smart Scoop section on page 4).

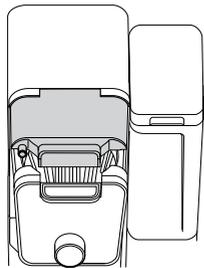


Slide the sliding lid forward, ensuring it is completely closed.


OR




PODS

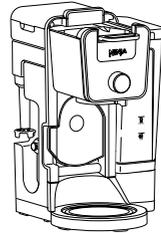

Ensure the brew basket and Ninja Pod Adapter are installed in the brewer (refer to steps on pages 3 and 5).

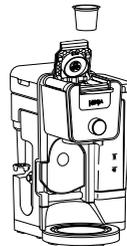

Lift adapter handle to reveal pod holder and insert a pod.

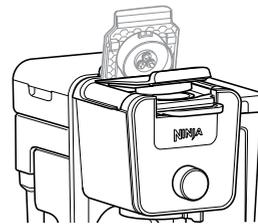

Firmly push down on the handle to pierce the pod. Some noise and resistance is normal.

2 CHOOSE A SIZE



GROUNDS

*Approximate brew volumes based on Classic brew. Rich brew will produce slightly less output. Refer to the Approximate Brew Volumes chart in the Owner's Guide for more information.

	8 oz.
	10 oz.
	12 oz.
	15 oz.
	18 oz.
	28 oz.
	40 oz.
	52 oz.
	65 oz.



PODS

Pods cannot brew in carafe sizes.

*Approximate brew volumes based on Classic brew. Rich brew will produce slightly less output. Refer to the Approximate Brew Volumes chart in the Owner's Guide for more information.

	6 oz.
	8 oz.
	10 oz.
	12 oz.

NOTE: Make sure to use a vessel that is big enough for the brew size you select.

3 CHOOSE A BREW



Smooth, well-balanced flavor.



Richer than classic, with more intense flavor that stands up to milk, cream, or flavoring.



Specially designed to brew hot over ice for freshly brewed iced coffee that is not watered down.
Always fill your vessel to the top with ice cubes before brewing Over Ice.



A super-rich concentrate that allows you to make coffee-based drinks like cappuccinos and lattes.
Will only brew 4 oz.

NOTE: DO NOT use any glassware except the provided Ninja carafe, which is made of specialized glass that is safe to use.

4 BREW




Press the **START BREW** button to start brewing. There will be an illuminating progress bar on the display to track the status of your brew.

THE BREW MAY PAUSE ONCE OR MULTIPLE TIMES DURING THE BREW CYCLE. THAT'S OK. Pausing allows the coffee grounds to fully extract and unlock the full flavor of the brew style.

NOTE: Ensure the drip stop is open before starting your brew.

DRIP STOP

The drip stop is used to close off the brew basket to prevent any coffee from dispensing. You will need to manually open and close the drip stop by moving the handle to your desired position. The drip stop can be closed and reopened at any point before, during, or after a brew.

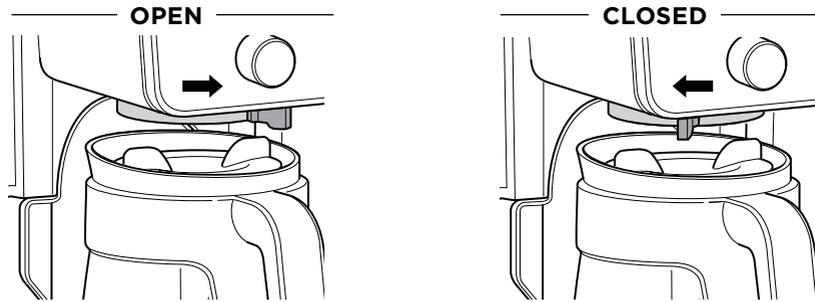


CAN'T WAIT FOR THAT FIRST CUP?

Close the drip stop to pause the brew cycle, and pour yourself a cup. Then, reopen the drip stop to continue the brew.

STOP THE DRIPS AFTER A BREW

At the end of a brew, close the drip stop to prevent coffee dripping from the brew basket and Ninja® Pod Adapter.

FROTHING

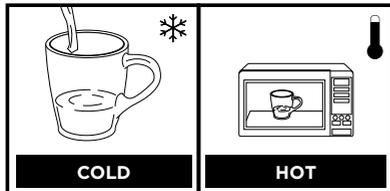

THE INTEGRATED FROTHER DOES NOT HEAT MILK.


1. Add milk to your cup until it is about 1/3 full.

* For cold froth, continue to Step 2.

🌡 For hot froth, microwave for 45-60 seconds.



2. Swing the arm of the frother toward the front of the brewer. Install the frother whisk by twisting it to the right.

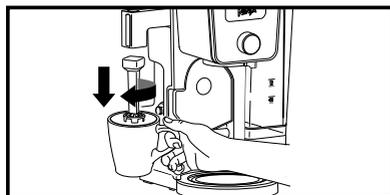

3. Hold the cup under the frother and submerge the whisk just below the surface of the milk. Press and hold the button on top of the frother and froth for 30-45 seconds.

4. Remove the frother whisk by twisting it to the left. Keep your cup below the whisk while you carry it to your sink or dishwasher for easy cleaning.



WARNING: To avoid contact with steam and hot surfaces, **DO NOT** reach across top of brewer to froth.

GUIDE TO KEEPING COFFEE HOT

The type of cup you brew into can greatly influence the temperature of your coffee when drinking.

	CERAMIC CUP			PAPER CUP
Cup Temperature	Room temperature	Pre-warmed with hot water	Pre-warmed in microwave with milk	Room temperature
Drinking Temperature	Hot 	Hotter 	Hotter 	Hottest
Why is there a difference?	A cold ceramic mug will steal heat from the coffee as it warms itself up.	If the mug is already warm, it will not steal as much heat from the coffee.	Just like your cold mug, cold milk lowers the temperature of your coffee.	Unlike a ceramic mug, a thinner paper cup does not steal substantial heat from the coffee.

NOTE: DO NOT put the carafe in the microwave.

SCAN HERE



TO ACCESS OWNER'S GUIDE,
HOW-TO VIDEOS, AND MORE

NINJA
DUALBREW
GROUND & PODS
SPECIALTY COFFEE SYSTEM

For questions or to register your product, contact us at
1-877-646-5288 or visit us online at ninjakitchen.com



@ninjakitchen

CFP451_QSG_REV_MV10

© 2022 SharkNinja Operating LLC

NINJA is a registered trademark of SharkNinja Operating LLC.

NINJA SMART SCOOP is a trademark of SharkNinja Operating LLC.

K-CUP is a registered trademark of Keurig Green Mountain, Inc. Use of the K-CUP trademark does not imply any affiliation with or endorsement by Keurig Green Mountain, Inc.

This product may be covered by one or more US patents. See sharkninja.com/patents for more information.