

# NUTRI NINJA

BL486CO

## FEATURES:

- XL Capacity & Insulated Stainless Steel Nutri Ninja cup for Nutrient & Vitamin Extraction\*

- 1000 Watt Motor

- User Interface:

### **START / STOP**

Press once to start 60 seconds of continuous operation, press again to stop.

### **PULSE**

Press once for single pulse. Repeat as needed. Press in quick intervals for short pulses.

### **AUTO-iQ™ PRO EXTRACTION**

Pulses and blends fresh or softer ingredients to create smooth consistent results in 45 seconds.

### **AUTO-iQ™ XL EXTRACTION**

Pulses and blends frozen, fibrous or hard ingredients to create smooth consistent results in 70 seconds.

- Personalized drinks and juices
- Pro Extractor Blades® Assembly, interchangeable with all Nutri Ninja cups
- XL Capacity 48 oz. Ninja® Jar, BPA free
- Professional Stainless Steel 24 oz. Nutri Ninja® Cup, BPA free
- Regular 24 oz. Nutri Ninja Cup, BPA free
- Sip & Seal® lids for drinks on the go
- Cord Storage (Underneath Unit)



**Welcome to the Nutri Ninja Complete Extraction System™ Experience! The Nutri Ninja Complete Extraction System is a high-powered innovative blender with a compact design and outstanding performance. It is perfect for ice crushing, chopping, and blending. Available with an XL Capacity 48 oz. Ninja Jar and a cold insulated, Professional Stainless Steel 24 oz. Nutri Ninja Cup for nutrient & vitamin extraction\*. Blend and go with the convenient Sip & Seal lids and create delicious drinks to get you out the door quickly!**

\* Extract a drink containing vitamins & nutrients from fruits and vegetables.

# IMPORTANT SAFETY INSTRUCTIONS

## For Household Use Only

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR NUTRI NINJA® COMPLETE EXTRACTION SYSTEM™.

### POLARIZED PLUG

**⚠ WARNING:** To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. **DO NOT modify the plug in any way.**

**⚠ WARNING:** Extension cords are not recommended for use with this product.

**⚠ WARNING:**  
TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- ⚠ WARNING:** Remove utensils prior to processing.
- ⚠ CAUTION:** Blade assembly is sharp, handle with care. When handling the blade assembly, always hold by the base of the blade assembly.
- ⚠ CAUTION:** Do not blend hot liquids.
- ⚠ CAUTION:** We do not recommend grinding in any of our Nutri Ninja Cups.

1. To protect against electrical shock, do not submerge the appliance or allow the power cord to come into contact with water or any other liquid.
2. **DO NOT** allow the appliance to be used by children. Close attention is necessary when used near children. This is not a toy.
3. Never leave an appliance unattended when in use.
4. Remove the power cord from the electrical outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.
5. **DO NOT** abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp the plug and pull to disconnect.
6. **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. Return the appliance to SharkNinja Operating LLC for examination, repair or adjustment.



7. Appliance accessories are not intended to be used in the microwave. Do not place the cup or the lid in the microwave as it may result in damage to the accessories.
8. **DO NOT** let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.
9. Always use appliance on a dry, level surface.
10. Keep hands, hair, clothing, as well as utensils out of cup while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the appliance is not running.
11. Avoid contact with moving parts.
12. **DO NOT** attempt to sharpen blades.
13. **DO NOT** use the appliance if blade assembly is bent or damaged.
14. To reduce risk of injury, never place the blade assembly on the base without the proper attachment.
15. **DO NOT** operate this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
16. The use of attachments or accessories including canning jars, not recommended or sold by the manufacturer may cause fire, electric shock or personal injury.
17. **DO NOT** remove the cup from the motor base while the appliance is running.
18. To reduce the risk of injury, **NEVER** operate the appliance without the blade assembly in place.
19. **DO NOT** try to defeat the interlock mechanism; make sure that the attachment is properly installed before operating the appliance.
20. **DO NOT** expose cups to extreme temperature changes.
21. **DO NOT** overfill.
22. **DO NOT** operate the appliance empty.
23. If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 30 minutes before using again.
24. **THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.

# SAVE THESE INSTRUCTIONS

---

## THIS BOOK COVERS MODEL NUMBERS:

BL486C0 30

## TECHNICAL SPECIFICATIONS

Voltage: 120V., 60Hz.

Power: 1000 Watts

### Regular Nutri Ninja Cup Capacity:

24 ounces (3 cups), 22 liquid ounces (2.75 cups)

### Professional Stainless Steel Nutri Ninja Cup:

24 ounces (3 cups), 22 liquid ounces (2.75 cups)

 
### XL Capacity Ninja® Jar:

48 ounces (6 cups)

## What's Inside




1000 Watt Motor Base



(2) Regular 24 oz.  
Nutri Ninja® Cup



 XL Capacity 48 oz.  
Ninja® Jar



Professional Stainless Steel 24 oz.  
Nutri Ninja Cup



Pro Extractor  
Blades® Assembly



(3) Sip & Seal® Lid

**⚠ CAUTION: Do not blend hot liquids.**

---

## Before First Use

### PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

- ⚠ WARNING: Never leave the appliance unattended while in use.**
- ⚠ WARNING: Remove utensils prior to processing.**
- ⚠ CAUTION: Blades are sharp! Use extreme caution when handling the Pro Extractor Blades Assembly. Always hold it by the base of the Pro Extractor Blades Assembly.**
- ⚠ CAUTION: Do not blend hot liquids.**
- ⚠ CAUTION: Never attempt to remove the cup while the appliance is still operating.**

**IMPORTANT: Attachments are interchangeable.**

**IMPORTANT: Never operate the appliance empty.**


**IMPORTANT: Appliance accessories are not intended to be used in the microwave as it may result in damage to the accessories.**

- 1 Remove all packaging material and labels from the appliance.
- 2 Wash the lids, cups and Pro Extractor Blades Assembly in warm, soapy water with a soft cloth.
- ⚠ CAUTION: Handle the Pro Extractor Blades Assembly with care when washing as the blades are very sharp.**
- 3 Rinse and dry thoroughly.  
**NOTE:** The Professional Stainless Steel 24 oz. Nutri Ninja Cup should be hand washed in warm, soapy water with a soft cloth. It is NOT dishwasher safe.
- 4 Plastic Nutri Ninja cups, lids and Pro Extractor Blades Assembly are all dishwasher safe. It is recommended that the lids and Pro Extractor Blades Assembly be placed on the top rack. Ensure that the Pro Extractor Blades Assembly is removed from the cups before placing in the dishwasher.
- 5 Wipe the motor base clean with a damp cloth.


## Use

- ⚠ **WARNING:** Never leave the appliance unattended while in use.
  - ⚠ **WARNING:** Remove utensils prior to processing. Failure to remove may cause the container to be damaged or to shatter, which may cause personal injury.
  - ⚠ **CAUTION:** Use caution when handling the Pro Extractor Blades® Assembly as the blades are very sharp.
  - ⚠ **CAUTION:** DO NOT BLEND HOT LIQUIDS.
  - ⚠ **CAUTION:** Do not put hot liquids in the Stainless Steel 24 oz. Nutri Ninja® Cup before blending. Start with cool or room temperature liquid. Heated liquid can create internal pressure in a sealed cup, which may erupt on opening and cause a burn injury.
- IMPORTANT:** Make sure that the motor base is plugged in for use.
- IMPORTANT:** The Sip & Seal® lids are ONLY to be used with the Nutri Ninja cups and the Professional Stainless Steel 24 oz. Nutri Ninja cup. The Sip & Seal lids are not intended for use with the XL Capacity 48 oz. Ninja® Jar.

### ASSEMBLY

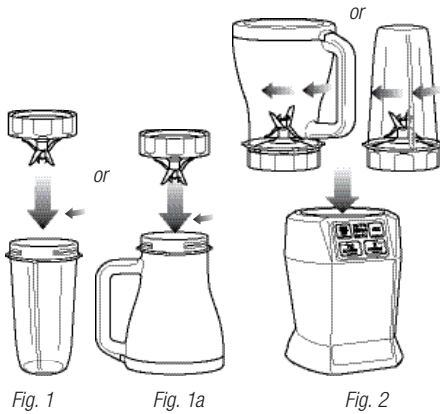

### USE

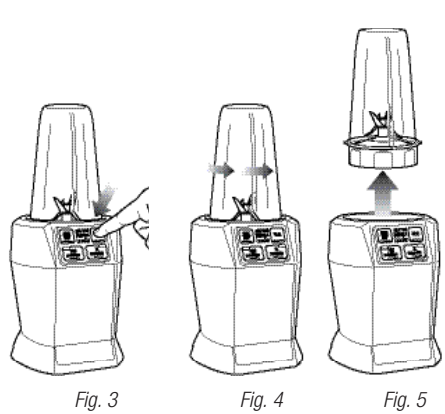

### REMOVAL

**IMPORTANT:** Place the motor base on a clean, dry, level surface such as a counter or table top.

- 1 Make sure that the motor base is plugged in for use. **Lights will not yet illuminate.**
- 2 Add ingredients to the cup.  
**NOTE:** Do not overfill! To avoid leaking, do not add ingredients past the "MAX" fill line.
- 3 Place the Pro Extractor Blades Assembly onto the cup and twist it on tightly until you have a good seal. **(Fig. 1, Fig. 1a)**
- 4 Turn the cup upside down and place it onto the motor base, aligning the tabs on the cup with the motor base. Turn it clockwise, until you feel it click into place. The lights will now illuminate. **(Fig. 2)**
- 5 Select a button to activate. For the 24 oz. cups we recommend selecting Auto-iQ™ Pro Extraction, Start/Stop or Pulse. For the XL Capacity 48 oz. Ninja Jar we recommend selecting Auto-iQ™ XL Extraction, Start/Stop or Pulse. **(Fig. 3)**

- 6 To remove the cup, ensure that the motor has completed its operation, and turn the cup counterclockwise. **(Fig. 4)** Pull straight up to remove. **(Fig. 5)**
- 7 Turn the cup upright and remove the Pro Extractor Blades Assembly by twisting the Pro Extractor Blades Assembly counter clockwise. Be sure to store the Pro Extractor Blades Assembly attached to an empty cup when not in use.
- 8 Twist the Sip & Seal lid onto the cup to enjoy your drink on the go. Press flip top cap firmly into the opening to get the best seal. The flip top cap locks open when pressed backward.
- 9 Make sure that the motor base is unplugged when not in use.
- 10 To easily disengage the motor base suction cups, tip the unit forward from the rear.

## Suggested Uses

FUNCTION	CONTAINER	TYPE OF FOOD
Chopping	Regular 24 oz. Nutri Ninja® Cup Professional Stainless Steel 24 oz. Nutri Ninja Cup	Salsa Chunky Dips
Puréeing	Regular 24 oz. Nutri Ninja Cup Professional Stainless Steel 24 oz. Nutri Ninja Cup 48 oz. XL Capacity Ninja® Jar	Smooth Dips Salad Dressings Sauces* Soups*
Frozen Blending	Regular 24 oz. Nutri Ninja Cup Professional Stainless Steel 24 oz. Nutri Ninja Cup 48 oz. XL Capacity Ninja Jar	Smoothies Frappes Milkshakes Frozen Cocktails
Nutrient Extracting	Regular 24 oz. Nutri Ninja Cup Professional Stainless Steel 24 oz. Nutri Ninja Cup 48 oz. XL Capacity Ninja Jar	Nutrient Juices Infused teas + waters

\* When blending soups or sauces, make sure they're cooled to room temperature first - Ninja containers are not intended for hot blending.

**⚠ CAUTION: DO NOT process dry ingredients in the Nutri Ninja cups. Always add liquid to blend in the plastic or Professional Stainless Steel 24 oz. Nutri Ninja Cups.**

We do not recommend grinding in any of our Nutri Ninja Cups

### FILLING YOUR NUTRI NINJA

Want to create smooth and delicious drinks using your Nutri Ninja cups? Simply add ingredients to the container in the order they appear in each recipe, or follow the guideline below when creating your own customized recipes. (Fig. 6, Fig. 7)



Fig. 6



Fig. 7

# Care & Maintenance

## HOW TO CLEAN

**▲ CAUTION: Make sure that the motor base is unplugged from the power source before inserting or removing any attachment and before cleaning.**

**▲ CAUTION: DO NOT immerse the motor base into water or any other liquid.**

**▲ CAUTION: Handle the Pro Extractor Blades® Assembly with care when washing as the blades are very sharp.**

- 1 Separate/remove all parts from each other.
- 2 Clean the motor base with a damp cloth and wipe dry.

**NOTE:** The Professional Stainless Steel 24 oz. Nutri Ninja® Cup should be hand washed in warm, soapy water with a soft cloth. It is NOT dishwasher safe.

- 3 Place plastic Nutri Ninja cups in the dishwasher. Place the lids and Pro Extractor Blades® Assembly on the top rack.

### OR

- 4 Carefully hand wash the lids, cups and Pro Extractor Blades Assembly in warm, soapy water with a soft cloth.

If the appliance needs servicing, please call customer service at 1-877-646-5288.

## HOW TO STORE

- 1 Store the Nutri Ninja Complete Extraction System™ upright. Secure the power cord underneath the base by wrapping the cord around the cord wrap. Do not place anything on top of the base. Store the cups with the Pro Extractor Blades Assembly attached to the cup and all other attachments along side the appliance where they will not be damaged and won't cause a hazard.

## RESETTING THE MOTOR THERMOSTAT

The Nutri Ninja Complete Extraction System™ features a unique safety system which prevents damage to the unit's motor and drive system should you inadvertently overload your appliance. If the appliance is being overloaded, the motor will stop. To reset the appliance, follow the resetting procedure below:

- 1 Unplug the appliance from the electrical outlet.
- 2 Remove and empty the cup and ensure that no food is jamming the Pro Extractor Blades Assembly.
- 3 Allow the appliance to cool for approximately 30 minutes.
- 4 Re-install the cup onto the base and re-plug the appliance into the electrical outlet.
- 5 Proceed to use the appliance as before while making sure not to exceed the recommended maximum capacities.

# Troubleshooting Guide

PROBLEMS	POSSIBLE REASONS & SOLUTIONS
<b>Unit doesn't turn on</b>	<ul style="list-style-type: none"><li>• Make sure the unit is plugged in.</li><li>• Insert and rotate cup clockwise in the base until it "clicks". Lights should illuminate.</li></ul>
<b>Unit doesn't turn off</b>	<ul style="list-style-type: none"><li>• Press Start/Stop.</li><li>• Remove cup from base by rotating cup counterclockwise and lifting out. Display should turn off. Unplug the power cord from the outlet.</li></ul>
<b>Lid/Pro Extractor Blades® Assembly hard to assemble</b>	<ul style="list-style-type: none"><li>• Set the cup on a level surface. Place the lid or Pro Extractor Blades Assembly on the top of the cup and align the threads so that the lid/Pro Extractor Blades Assembly sit flat on the cup. Twist clockwise so that the lid/Pro Extractor Blades Assembly evenly align to the cup until a tight seal is achieved.</li></ul>
<b>Food is not evenly chopped</b>	<ul style="list-style-type: none"><li>• Cut pieces down to even sizes, and reduce the amount of food in the cup. Use very short pulses by quickly pressing the "PULSE" button.</li></ul>
<b>Food doesn't mix well, food gets stuck</b>	<ul style="list-style-type: none"><li>• Pulse ingredients for best results. Pulse in 1-3 second intervals for even blending and chopping. For frozen ingredients, pulse in short intervals of 2-5 seconds and repeat.</li></ul>
<b>Unit moves on counter while blending</b>	<ul style="list-style-type: none"><li>• Make sure the surface as well as the feet of the unit are clean and dry.</li></ul>
<b>Unit is difficult to remove from counter for storage</b>	<ul style="list-style-type: none"><li>• Tip unit forward from the back to easily disengage the suction feet.</li></ul>

## Replacement Parts

### ORDERING REPLACEMENT PARTS

To order additional parts and attachments, please visit our website: [www.ninjakitchen.com](http://www.ninjakitchen.com) or feel free to contact customer service: **1-877-646-5288**.









## ONE (1) YEAR LIMITED WARRANTY

**SharkNinja Operating LLC** warrants this product to be free from material defects and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

The liability of **SharkNinja Operating LLC** is limited solely to the cost of the repair or replacement of the unit at our option. This Limited Warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This Limited Warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This Limited Warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alteration to the product or any of its parts, which have been performed by a repair person not authorized by **SharkNinja Operating LLC**.

If your appliance fails to operate properly while in use under normal household conditions within the Limited Warranty period, you may return the complete appliance and accessories with proof of purchase and date, freight prepaid. For Customer Service support, call 1-877-646-5288 or visit our website [www.ninjakitchen.com](http://www.ninjakitchen.com).

If the appliance is found by **SharkNinja Operating LLC** to be defective, in **SharkNinja Operating LLC's** sole discretion, we will repair or replace it free of charge. Proof of purchase date and a check made payable to **SharkNinja Operating LLC** in the amount of \$19.95 to cover the cost of return shipping and handling must be included.\*

This Limited Warranty is extended to the original purchaser of the unit and excludes all other legal, implied and/or conventional warranties. The responsibility of **SharkNinja Operating LLC** if any, is limited to the specific obligations expressly assumed by it under the terms of this Limited Warranty. In no event is **SharkNinja Operating LLC** liable for incidental or consequential damages to anyone of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or from province to province.

**\*IMPORTANT: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with the item. We recommend you insure the package (as damage in shipping is not covered by your Limited Warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE".**

---

## PRODUCT REGISTRATION

Please visit [www.ninjakitchen.com](http://www.ninjakitchen.com) or call **1-877-646-5288** to register your new Ninja® product within ten (10) days of purchase. You will be asked to provide the store name, date of purchase and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

SharkNinja Operating LLC  
US: Newton, MA 02459  
CAN: Ville St-Laurent, QC H4S 1A7  
**1-877-646-5288**  
**[www.ninjakitchen.com](http://www.ninjakitchen.com)**

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

**Ninja, Nutri Ninja, Pro Extractor Blades** and **Sip & Seal** are registered trademarks of SharkNinja Operating LLC.

**Auto-iQ** and **Complete Extraction System** are trademarks of SharkNinja Operating LLC.

For SharkNinja U.S. Patent information visit [www.sharkninja.com/USPatents](http://www.sharkninja.com/USPatents)

© 2015 SharkNinja Operating LLC  
BL486CO\_IB\_E\_150930\_2  
PRINTED IN CHINA