

NINJA™ Foodi™ NeverStick™ BAKEWARE

USE & CARE GUIDE

IMPORTANT SAFETY, USE & CARE INFORMATION

Thank you for your purchase of Ninja™ Foodi™ NeverStick™ Bakeware and welcome to the Ninja family! We hope you love your bakeware and will be inspired to create something new in your kitchen. These guidelines include suggestions for how to maintain your bakeware as well as important safety information.

BEFORE FIRST USE

Read all instructions carefully. Wash bakeware in hot, soapy water, then rinse and dry thoroughly.

IMPORTANT SAFETY GUIDELINES

- Keep small children away from the oven while baking.
- For oven use only. **DO NOT** use Bakeware on the stovetop or over a direct flame.
- Use caution when handling hot bakeware and always have potholders available for use.
- Never use your bakeware in the microwave.

Register your Ninja™ Foodi™ NeverStick™ Bakeware to stay up-to-date with what's new from Ninja and learn about your warranty at registeryourninja.com.



REGISTER YOUR PURCHASE



registeryourninja.com



Scan QR code using mobile device

For additional info, tips, tricks, FAQs, and self-troubleshooting visit support.ninjakitchen.com or contact Customer Service at 1-855-460-5431.

HEAT SETTINGS

It is not recommended to exceed a baking temperature of 500°F (260°C). Ninja™ Foodi™ NeverStick™ Bakeware conducts heat efficiently. We suggested monitoring the oven temperature and baking times for the first several uses and reduce time and temperature as necessary.

DO NOT use your Bakeware under the broiler as temperatures often exceed 500°F (260°C).

PAN USE & CARE

Ninja™ Foodi™ NeverStick™ Bakeware is dishwasher safe, but hand-washing with a mild liquid dish soap is always best to keep your Bakeware looking and performing like new.

- Follow recipe instructions, greasing and flouring as directed.
- Use of aerosol cooking sprays is not recommended. These burn at low temperatures and will leave a residue that leads to sticking.
- Avoid soaking pans overnight. Rinse and dry thoroughly after washing.
- Do not use oven cleaners or dishwasher detergent tablets to clean bakeware as they will damage the finish.
- Avoid cleaning with abrasive cleansers or scouring pads.
- Baking foods that contain a high oil content may stain your bakeware but will not affect performance.

STORAGE

If stacking or nesting bakeware, gently place the smaller pan inside the larger one. Place a paper towel or soft cloth in between pans to help protect the coating when stacking. Direct contact between pans during storing could lead to scratching or damage to the coating.

UTENSIL USE

Use only silicone, nylon, or wooden utensils.

DO NOT use sharp metal utensils such as knives or forks.

DO NOT cut directly on your bakeware as it will damage the coating and void the warranty.

SharkNinja Operating LLC
US: Needham, MA 02494
1-855-460-5431 | ninjakitchen.com

FOODI, NEVERSTICK, and NINJA are trademarks of SharkNinja Operating LLC.
For SharkNinja U.S. patent information, visit sharkninja.com/patents.
© 2022 SharkNinja Operating LLC.