


Please make sure to read the enclosed Ninja Owner's Guide prior to using your unit.

NINJA®

EXPRESS CHOP®

WHAT'S INCLUDED

 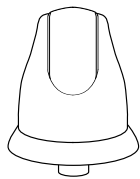


Power Pod




Splash Guard

Doubles as a storage lid



Chopping Blade Assembly

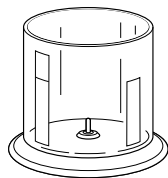

16 oz. Processing Bowl

- 470 mL/2 cups
- No-Slip Bottom
- BPA Free

CLEANING

Dishwasher: The 16 oz. Processing Bowl, Splash Guard, and Chopping Blade Assembly are all dishwasher safe. The Splash Guard and Chopping Blade Assembly are top rack dishwasher safe. Ensure the Chopping Blade Assembly is removed from the 16 oz. Processing Bowl before placing in the dishwasher.

Hand Washing: Wash the 16 oz. Processing Bowl, Splash Guard, and Chopping Blade Assembly in warm, soapy water. When washing the Chopping Blade Assembly, use a dishwashing utensil with a handle to avoid direct hand contact with blades. Handle the Chopping Blade Assembly with care to avoid contact with sharp edges. Rinse and air-dry thoroughly.



WARNING: Handle the Chopping Blade Assembly with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.

QUESTIONS? We're here to help. Call 1-877-646-5288 or visit ninjakitchen.com


Please make sure to read the enclosed Ninja Owner's Guide prior to using your unit.

NINJA®


EXPRESS CHOP®

QUICK ASSEMBLY


ASSEMBLING & HANDLING THE CHOPPING BLADE ASSEMBLY

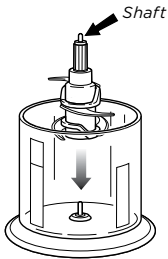


1. Holding the Chopping Blade Assembly by the top of the shaft, insert it into the 16 oz. Processing Bowl, making sure it is locked in place on the pin at the bottom of the container.

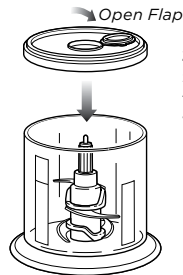

2. Set the Splash Guard on the 16 oz. Processing Bowl, with the flap open.

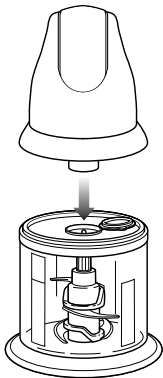

3. Set the Power Pod on top of the Splash Guard. When pulsing, hold onto the the 16 oz. Processing Bowl with one hand and the Power Pod with the other to keep them in place. **The Pod is powerful!**

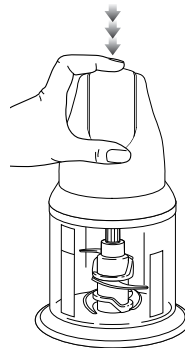

4. Hold the Processing Bowl firmly while pressing the on/off pulse button.

NOTE: DO NOT operate the appliance continuously for more than 15 seconds at a time. Be careful not to over-process. For coarsely chopped foods, use repeated short pulsing action until the desired consistency is reached.



WARNING: Chopping Blade Assembly is sharp and not locked in place. Before emptying contents of the bowl, make sure to carefully remove Splash Guard lid and Chopping Blade Assembly, holding the blade assembly by the shaft. Failure to do so will result in a risk of laceration. Refer to the Ninja Owner's Guide for additional information.