

# NINJA®

## CO401B

### OWNER'S GUIDE

## FOODI® POWER BLENDER ULTIMATE SYSTEM




# THANK YOU

for purchasing the Ninja® Foodi® Power Blender Ultimate System



## REGISTER YOUR PURCHASE

 [registeryourninja.com](http://registeryourninja.com)

 Scan QR code using mobile device

## RECORD THIS INFORMATION

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_  
(Keep receipt)

Store of Purchase: \_\_\_\_\_

## TECHNICAL SPECIFICATIONS

Voltage: 120V~, 60Hz

Power: 1200 Watts

**PLEASE READ CAREFULLY AND  
KEEP FOR FUTURE REFERENCE.**

**TIP:** You can find the model and serial numbers on the QR code label on the back of the unit by the power cord.




# CONTENTS

<b>Important Safety Instructions</b> .....	<b>4</b>
<b>Parts</b> .....	<b>8</b>
<b>Before First Use</b> .....	<b>9</b>
<b>Getting to Know the Disc Assemblies</b> .....	<b>9</b>
<b>Using the 2-Part Pusher</b> .....	<b>9</b>
<b>Using the Control Panel</b> .....	<b>10</b>
<b>Using Variable Speed Control</b> .....	<b>10</b>
<b>Using the Auto-iQ® Programs</b> .....	<b>11</b>
<b>Using the Power Blender &amp; Processor Pitcher &amp; Disc Assemblies</b> .....	<b>12</b>
<b>Using the Power Blender &amp; Processor Pitcher with Flat Lid &amp; Stacked Blade Assembly</b> .....	<b>14</b>
<b>Using the Power Blender &amp; Processor Pitcher with Flat Lid &amp; Dough Blade Assembly</b> .....	<b>16</b>
<b>Using the XL Smoothie Bowl Maker</b> .....	<b>18</b>
<b>Using the Nutrient Extraction* Cup</b> .....	<b>20</b>
<b>Care &amp; Maintenance</b> .....	<b>22</b>
Using the Blender For Stuck-On Ingredients.....	22
Cleaning.....	23
Storing.....	23
Resetting the Motor.....	23
Ordering Replacement Parts.....	23
<b>Troubleshooting Guide</b> .....	<b>24</b>
<b>Warranty</b> .....	<b>25</b>

\*Extract a drink containing vitamins and minerals from fruits and vegetables.

# IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

	<b>Read and review instructions for operation and use.</b>
	<b>Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.</b>
	<b>For indoor and household use only.</b>
<b>When using electrical appliances, basic safety precautions should always be followed, including the following:</b>	

## ⚠ WARNING

- 1 Read all instructions prior to using the appliance and its accessories.
- 2 Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
- 3 Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp, loose blades that can cause injury if mishandled.
- 4 Upon completion of processing, ensure the blade assembly is removed **BEFORE** emptying container's contents. Remove the blade assembly by carefully grasping the top of the shaft and lifting it from the container. Failure to remove the blade assembly before emptying the container results in a risk of laceration.
- 5 If using the pitcher's pour spout, hold the cover in place on the container or ensure lid lock is engaged when pouring to avoid risk of injury.
- 6 Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- 7 Blades are sharp. Handle carefully.
- 8 This product is provided with a Stacked Blade Assembly. **ALWAYS** exercise care when handling blade assemblies. The blade assemblies are sharp and are **NOT** locked in place in their containers. The blade assemblies are designed to be removable to facilitate cleaning and replacement if needed. **ONLY** grasp the blade assembly by the top of the shaft. Failure to use care when handling the blade assemblies will result in a risk of laceration.
- 9 **ALWAYS** exercise care when handling the Hybrid Edge™ Blades Assembly. The blades are sharp. **ONLY** grasp the Hybrid Edge Blades Assembly by the outer perimeter of the blade assembly base. Failure to use care when handling the blade assembly will result in a risk of laceration.
- 10 Turn the appliance **OFF**, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the outlet. **NEVER** unplug by grasping and pulling the flexible cord.
- 11 Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.
- 12 Before each use, inspect blade assemblies for damage. If a blade is bent or damage is suspected, contact SharkNinja to arrange for replacement.
- 13 **DO NOT** use this appliance outdoors. It is designed for indoor household use only.
- 14 This appliance has a polarized plug (one prong is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** modify the plug in any way.
- 15 **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. This appliance has no user-serviceable parts. If damaged, contact SharkNinja for servicing.

- 16 This appliance has important markings on the plug blade. The entire supply cord is not suitable for replacement. If damaged, please contact SharkNinja for service.
- 17 Extension cords should **NOT** be used with this appliance.
- 18 To protect against the risk of electric shock, **DO NOT** submerge the appliance or allow the power cord to contact any form of liquid.
- 19 **DO NOT** allow the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
- 20 **DO NOT** allow the unit or the cord to contact hot surfaces, including stoves and other heating appliances.
- 21 **ALWAYS** use the appliance on a dry and level surface.
- 22 **DO NOT** allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- 23 This appliance is **NOT** intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 24 **ONLY** use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments, including canning jars, not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
- 25 **NEVER** place a blade assembly on the motor base without it first being attached to its corresponding container (pitcher, cup or bowl) with the lid also in place.
- 26 Keep hands, hair, and clothing out of the container when loading and operating.
- 27 During operation and handling of the appliance, avoid contact with moving parts.
- 28 **DO NOT** fill containers past the **MAX FILL** or **MAX LIQUID** lines.
- 29 **DO NOT** operate the appliance with an empty container.
- 30 **DO NOT** microwave any containers or accessories provided with the appliance.
- 31 **NEVER** leave the appliance unattended while in use.
- 32 **DO NOT** blend hot liquids. Doing so may result in pressure buildup and steam exposure that can pose a risk of the user being burned.
- 33 **DO NOT** process dry ingredients without adding liquid to the single-serve cup, XL bowl, or Pitcher. They are not intended for dry blending.
- 34 **DO NOT** perform grinding operations.

## SAVE THESE INSTRUCTIONS

# IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

## ⚠ WARNING

- 35 NEVER** operate the appliance without lids and caps in place. **DO NOT** attempt to defeat the interlock mechanism. Ensure the container and lid are properly installed before operation.
- 36** Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
- 37** Keep hands and utensils out of containers while chopping to reduce the risk of severe personal injury or damage to the blender/food chopper. A scraper may be used **ONLY** when the blender or processor is not running.
- 38** If you find unmixed ingredients sticking to the sides of the cup, stop the appliance, remove the blade assembly, and use a scraper to dislodge ingredients.
- 39 DO NOT** open the pitcher's pour spout cap while blender is operating.
- 40** If you find unmixed ingredients sticking to the sides of the pitcher, stop the appliance, remove the lid, and use a spatula to dislodge ingredients. **NEVER** insert your hands into the pitcher, as you may contact one of the blades and experience a laceration.
- 41 DO NOT** attempt to remove the container or lid from the motor base while the blade assembly is still spinning. Allow the appliance to come to a complete stop before removing lids and containers.
- 42** If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, unplug the appliance and allow it to cool for approximately 15 minutes before using again.
- 43 DO NOT** expose the containers and accessories to extreme temperature changes. They may experience damage.
- 44** Remove the Hybrid Edge™ Blades Assembly from the single-serve cup or XL bowl upon completion of blending. **DO NOT** store ingredients before or after blending them in the cup or bowl with the blade assembly attached. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. For ingredient storage in the cup, use only Spout Lid or Storage Lid to cover.
- 45 DO NOT** submerge the motor base or control panel in water or other liquids. **DO NOT** spray motor base or control panel with any liquid.
- 46 DO NOT** attempt to sharpen blades.
- 47** Turn off the appliance and unplug the motor base before cleaning.
- 48** Never feed food by hand. Always use food pusher.
- 49** Unit is intended to create a dough ball. It is **NOT** intended to continuously knead. After dough ball forms, additional kneading should be done by hand on a work surface. If the unit moves excessively on the work surface, remove the dough ball and knead by hand.

**NOTE:** When using the pitcher and stacked blade assembly, **DO NOT** process more than 600g of raw meat, 600g of Parmesan (hard) cheese, or 700g of baking chocolate.

## SAVE THESE INSTRUCTIONS

# PARTS


- A** Pitcher Flat Lid
- B** 2-Part Pusher
- C** Pitcher Feed Chute Lid
- D** Pitcher
- E** Motor Base
- F** Total Crushing® & Chopping Blade Assembly (Stacked Blade Assembly)
- G** Dough Blade Assembly
- H** Reversible Slicing/Shredding Disc
- I** Grating Disc (not available with all models)
- J** Disc Spindle
- K** Hybrid Edge™ Blades Assembly
- L** Spout Lid
- M** 24 oz. Nutrient Extraction\*\* Cup
- N** Storage Lid
- O** 18 oz. XL Smoothie Bowl Maker with Built-in Tamper

\*64 oz. max liquid capacity.

**NOTE:** The Hybrid Edge Blades Assembly is not compatible with other Ninja products.

**NOTE:** Number of cups, bowls, and spout lids vary by model.

\*\*Extract a drink containing vitamins and nutrients from fruits and vegetables.

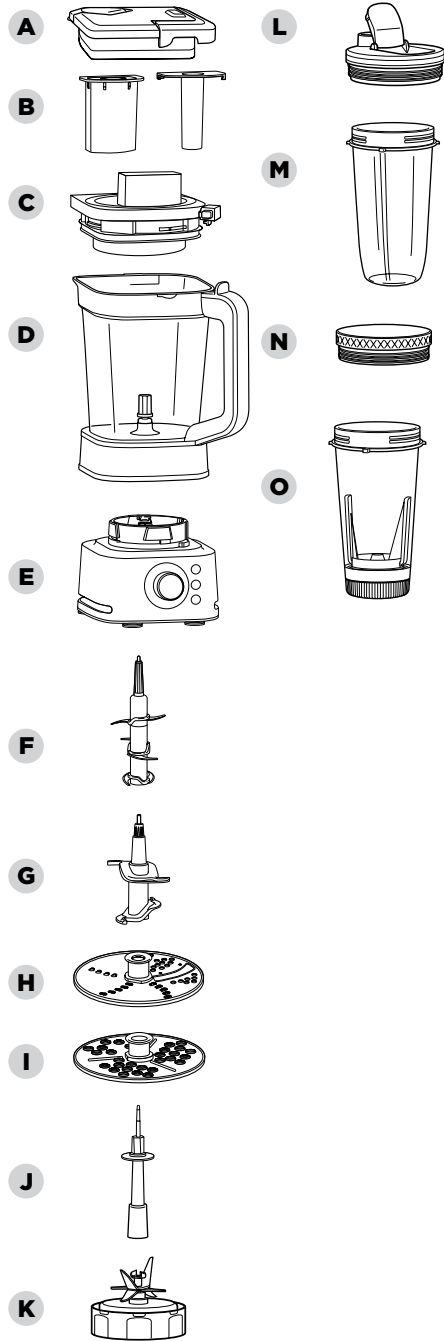

# BEFORE FIRST USE

**IMPORTANT:** Review all warnings on pages 4-7 before proceeding.


To purchase more accessories, visit [ninjakitchen.com](http://ninjakitchen.com).

**NOTE:** All attachments are BPA free and dishwasher safe. Ensure blade assemblies and lids are removed from the containers before placing in the dishwasher. Exercise care when handling blade assemblies.

- 1** Remove all packaging materials from the unit. Exercise care when unpacking blade assemblies, as the blades are sharp.
- 2** The stacked blade assembly is **NOT** locked in place in the container. Handle the stacked blade assembly and dough blade assembly by grasping the top of the shaft.
- 3** Handle the Hybrid Edge™ Blades Assembly by grasping around the perimeter of the blade assembly base.
- 4** Wash containers, lids, discs, and blade assemblies in warm, soapy, water using a dishwashing utensil with a handle to avoid direct contact with the blades. Exercise care when handling blade assemblies, as the blades are sharp.
- 5** Thoroughly rinse and air-dry all parts.


# GETTING TO KNOW THE DISC ASSEMBLIES

**NOTE:** Install the disc spindle into the pitcher before installing the disc assembly.

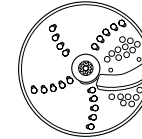

## REVERSIBLE SLICING/ SHREDDING DISC

The reversible slicing/shredding disc is perfect for outputs like thinly sliced cucumbers and shredded carrots. Face the side labeled “slicer” up for slicing and face the side labeled “shredder” up for shredding.

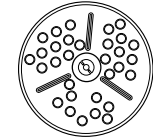

## GRATING DISC

(not available with all models)


The grating disc is ideal for outputs like grated Parmesan cheese.

# USING THE 2-PART PUSHER



Use the 2-part food pusher to help guide the food through the feed chute. The middle piece of the food pusher is removable to use for narrow ingredients, such as carrots. Rotate the top clockwise and lift to separate the pieces.

## USING THE CONTROL PANEL

 Use the Power button to turn the unit on or off.


### SWITCHING BETWEEN AUTO-IQ® AND MANUAL MODE:

To toggle between Auto-iQ Mode and Manual Mode, press the IQ/MANUAL button.

**NOTE:** In Manual Mode, Auto-iQ programs will not illuminate on the control panel.

### AUTO-IQ MODE

Unique timed programs customized to take the guesswork out of making great drinks and meals.

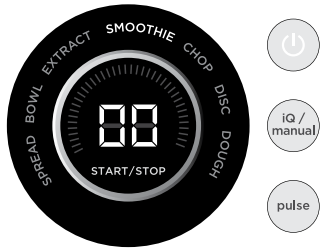

### SELECT AND RUN AN AUTO-IQ PROGRAM

Use the dial to select the desired program, then press START/STOP to begin. As the program runs, the timer will count down and the speedometer will show speed. When the countdown ends, blending will stop automatically. To stop blending before the end of the program, press START/STOP again.

## USING VARIABLE SPEED CONTROL & THE POWER BLENDER & PROCESSOR PITCHER

**NOTE:** If using the dough blade assembly, only use the flat lid and speed 1.

### START SLOW

Always start at a low speed (1-3) to better incorporate ingredients and prevent them from sticking to the side of the vessel.

### DIAL UP THE SPEED


Smoother blends call for higher speeds. Low speeds are great for chopping veggies and mixing dough, but you'll need to ramp up for purees and dressings.

### HIGH-SPEED BLENDING

Blend until you get your desired consistency. The longer you blend, the better the breakdown and smoother the outcome will be.

## USING THE AUTO-IQ® PROGRAMS

**NOTE:** The unit can detect if the pitcher with the flat lid, pitcher with the feed chute lid or the cup/bowl installed on the motor base. Only the functions available for a particular container will illuminate on the control panel.

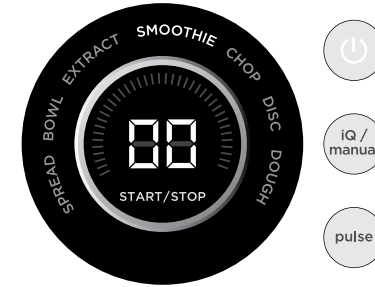

### AUTO-IQ PROGRAM FOR THE PITCHER WITH FLAT LID

**SPREAD** (not available on all models)  
Create anything from spreadable nut butters to zesty dressing to the perfect hummus.

**SMOOTHIE**  
Combine your favorite fresh or frozen ingredients, liquids, and powders to create smoothies and protein shakes.

**BOWL**  
Make thick, spoonable smoothie bowls to creamy frozen yogurt to refreshing sorbets.

**CHOP**  
Timed pulses and pauses give you consistent chopping results. Run program once for a large chop, twice for a small chop and three times if you prefer to mince.

**DOUGH**  
Use the Dough Blade Assembly to create dough for pizza, bread, and baked goods. When using the Dough Blade Assembly, only use the DOUGH program or speed 1.

### AUTO-IQ PROGRAM FOR THE PITCHER WITH FEED CHUTE LID

**DISC**  
Slice, shred and grate using a variety of fresh ingredients. **When using the disc assemblies, use the feed chute lid and only the DISC program or speed 1.**

### AUTO-IQ PROGRAMS FOR THE SINGLE-SERVE CUP AND XL BOWL

**EXTRACT**  
Ideal for tough, leafy, or fibrous whole fruits and vegetables, including their skins, seeds, and stems.

**SMOOTHIE**  
Combine your favorite fresh or frozen ingredients, liquids, and powders to create smoothies and protein shakes.

**NOTE:** For best results when using the single-serve cup, use the Auto-iQ Programs EXTRACT & SMOOTHIE.

**SPREAD** (not available on all models)  
Create anything from spreadable nut butters to zesty dressing to the perfect hummus.

**BOWL**  
Make thick, spoonable single-serve smoothie bowls to creamy frozen yogurt to refreshing sorbets.

**NOTE:** For best results when using the XL bowl, use the Auto-iQ SPREAD & BOWL.

# USING THE POWER BLENDER & PROCESSOR PITCHER & DISC ASSEMBLIES


**IMPORTANT:** Review all warnings on pages 4-7 before proceeding.

**IMPORTANT:** As a safety feature, when the unit is powered on, if the pitcher and lid are not properly installed, the timer will display “-” and the motor will be disabled. If this happens, repeat step 4. When the pitcher and lid are properly installed, and the unit is powered on, the available programs will illuminate, indicating the appliance is ready to use.


**NOTE:** The slicing/shredding disc is reversible. Use the side labeled “Slicer” for slicing. Carefully flip the disc over to the side labeled “Shredder” for shredding.

**NOTE:** The feed chute lid features a 2-part pusher to guide food through the chute. Rotate the top counterclockwise and lift to separate the pieces.

- 1 Place motor base on a clean, dry, level surface such as a countertop or table, then plug in the unit.

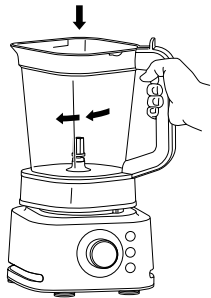

- 2 Lower the pitcher onto the motor base. The handle should be aligned slightly to the right and the pitcher should be oriented so the **LOCK** symbols are visible on the motor base. Rotate the pitcher clockwise until it clicks into place.

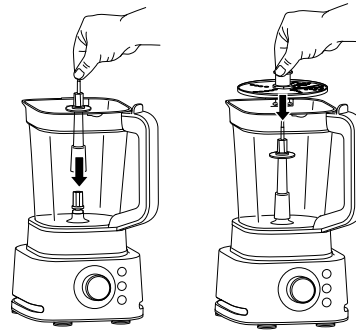


- 3 Place the disc spindle onto the drive gear inside the pitcher. Then, use the plastic grip to grasp the disc and place it over the spindle.

**NOTE:** The slicing/shredding disc is reversible. Ensure you place the side you would like to use facing up.

**NOTE:** Grating disc is not available with all models.




- 4 To install the feed chute lid on the pitcher, place the lid tab to the right of the handle. Press the lid down until it is secure. Rotate the tab clockwise until it clicks into place on the pitcher handle. Once the lid is locked in place, press the Power button to turn unit on.

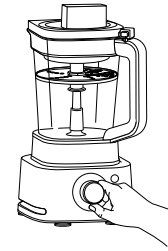

- 5a To use the DISC Auto-iQ® program, press START/STOP.

- 5b For Manual mode, press IQ/MANUAL. With speed 1 on the display, press START/STOP.

**NOTE:** Only speed 1 is available when using the feed chute lid and disc assemblies.

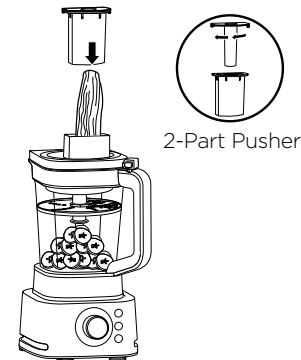


- 6a Add the prepped ingredients you want to slice, shred, or grate through the feed chute on the lid. Use the 2-part food pusher to help guide the food through the feed chute. The middle piece of the food pusher is removable to use for narrow ingredients. **DO NOT** process ingredients past the **DISC MAX** line on the pitcher.


**NOTE: DO NOT** force ingredients through the feed chute.

- 7a If using the DISC program, this preset feature will automatically stop at the end of the program.


- 7b If using Manual mode, press START/STOP when processing is complete. Wait for the unit to come to a complete stop.

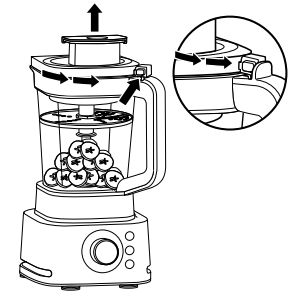

- 8 To remove the lid from the pitcher, press the release button above the pitcher handle, and rotate the lid tab counterclockwise out of the lock position, then lift the entire lid up.

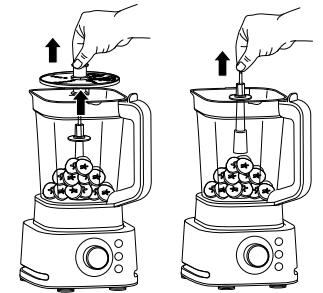

- 9 Using the plastic grip, carefully lift the disc out of the pitcher. Then, grasp the spindle by the top of the shaft and lift it out of the bowl.

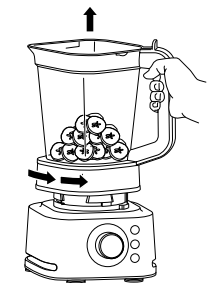

- 10 Remove the pitcher from the motor base by turning it counterclockwise and then lifting up.

- 11 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

# USING THE POWER BLENDER & PROCESSOR PITCHER WITH FLAT LID & STACKED BLADE ASSEMBLY

**IMPORTANT:** Review all warnings on pages 4–7 before proceeding.


**IMPORTANT:** As a safety feature, when the unit is powered on, if the pitcher and lid are not properly installed, the timer will display “- -” and the motor will be disabled. If this happens, repeat step 5. When the pitcher and lid are properly installed, and the unit is powered on, the available programs will illuminate, indicating the appliance is ready to use.

**NOTE: DO NOT** add ingredients before completing installation of the stacked blade assembly.


**NOTE:** If the stacked blade assembly is not fully seated, you will not be able to install and lock the lid.

**NOTE:** The pitcher lid handle will not fold down unless it is attached to the pitcher.

- 1 Plug in motor base and place on a clean, dry, level surface such as a countertop or table.

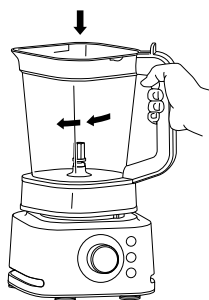


- 2 Lower the pitcher onto the motor base. The handle should be aligned slightly to the right and the pitcher should be oriented so the **LOCK** symbols are visible on the motor base. Rotate the pitcher clockwise until it clicks into place.

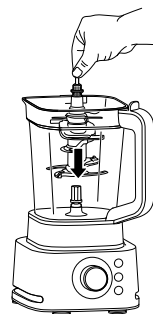


- 3 Exercising care, grasp the stacked blade assembly by the top of the shaft and place it onto the drive gear inside the pitcher. Note that the blade assembly will fit loosely onto the drive gear.

- 4 Add ingredients to the pitcher. **DO NOT** add ingredients past the **MAX LIQUID** line on the pitcher.

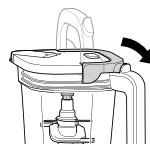


- 5 Place the flat lid on the pitcher. Press down on the handle until it clicks into place. Once the lid is locked in place, press the Power button to turn unit on. The available program buttons will illuminate and the unit will be ready for use.

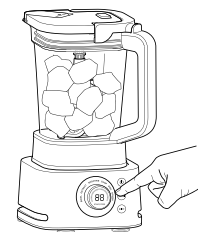


- 6a If using an Auto-iQ® program, use the dial to select the program that best suits your desired output, then press **START/STOP**. The preset feature will automatically stop at the end of the program. To stop the unit at any time, press **START/STOP**.


- 6b For Manual mode, press **IQ/MANUAL**. Use the dial to select your desired speed, ranging from 1 to 10, and press **START/STOP**. Once the ingredients have reached your desired consistency, press **START/STOP**, and wait for the unit to come to a complete stop.

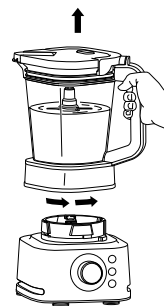


- 7 Remove the pitcher from the motor base by turning it counterclockwise and then lifting up.

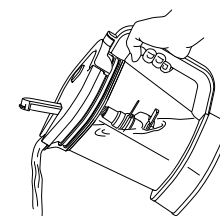

- 8a To pour out thinner mixtures, ensure the lid is locked in place, then open the pour spout cap.

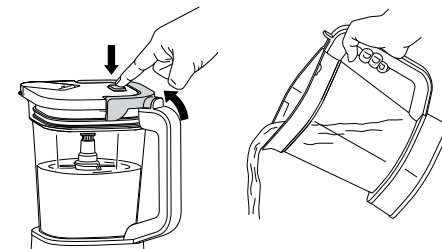

- 8b For thicker mixtures that cannot be emptied through the pour spout, remove the lid and stacked blade assembly before pouring. To remove the lid, press the **RELEASE** button and lift the handle. To remove the blade assembly, carefully grasp it by the top of the shaft and pull straight up. The pitcher can then be emptied.

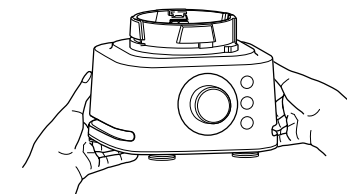

- 9 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.



# USING THE POWER BLENDER & PROCESSOR PITCHER WITH FLAT LID & DOUGH BLADE ASSEMBLY

**IMPORTANT:** Review all warnings on pages 4-7 before proceeding.


**IMPORTANT:** As a safety feature, when the unit is powered on, if the pitcher and lid are not properly installed, the timer will display "--" and the motor will be disabled. If this happens, repeat step 5. When the pitcher and lid are properly installed, and the unit is powered on, the available programs will illuminate, indicating the appliance is ready to use.

**NOTE: DO NOT** add ingredients before completing installation of the dough blade assembly.


**NOTE:** If the dough blade assembly is not fully seated, you will not be able to install and lock the lid.

**NOTE:** The pitcher lid handle will not fold down unless it is attached to the pitcher.

- 1 Plug in motor base and place on a clean, dry, level surface such as a countertop or table.

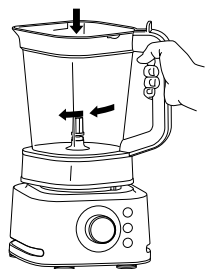

- 2 Lower the pitcher onto the motor base. The handle should be aligned slightly to the right and the pitcher should be oriented so the **LOCK** symbols are visible on the motor base. Rotate the pitcher clockwise until it clicks into place.

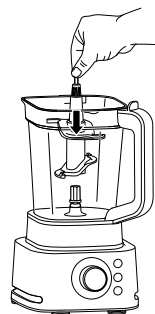

- 3 Exercising care, grasp the dough blade assembly by the top of the shaft and place it onto the drive gear inside the pitcher. Note that the blade assembly will fit loosely onto the drive gear.



- 4 Add ingredients to the pitcher. **DO NOT** add ingredients past the **DOUGH MAX** or **COOKIE MAX** line on the pitcher.




- 5 Place the flat lid on the pitcher. Press down on the handle until it clicks into place. Once the lid is locked in place, press the Power button to turn unit on. The available program buttons will illuminate and the unit will be ready for use.




- 6a If using an Auto-iQ® program, use the dial to select **DOUGH**, then press **START/STOP**. The preset feature will automatically stop at the end of the program. To stop the unit at any time, press **START/STOP**.

- 6b For Manual mode, press **IQ/MANUAL**. Use the dial to select speed 1, then press **START/STOP**. Once the ingredients have reached your desired consistency, press **START/STOP**, and wait for the unit to come to a complete stop.


**IMPORTANT:** Only use speed 1 when using the dough blade assembly.

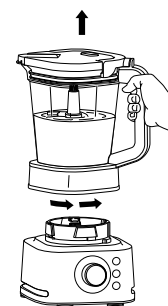

- 7 Remove the pitcher from the motor base by turning it counterclockwise and then lifting up.

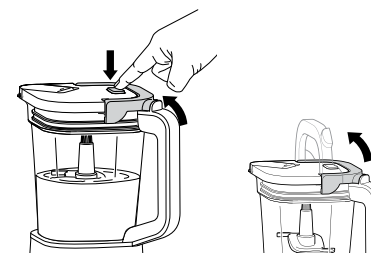

- 8 Remove the lid and dough blade assembly before removing contents. To remove the lid, press the release button above the handle, and rotate the lid tab counterclockwise out of the lock position, then lift the entire lid up.

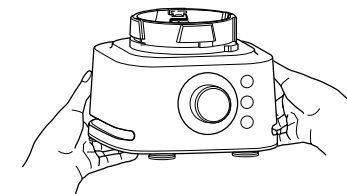

- 9 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

# USING THE XL SMOOTHIE BOWL MAKER

**IMPORTANT:** Review all warnings on pages 4-7 before proceeding.

**NOTE:** If the unit is plugged in and powered on, but the XL bowl and blade assembly is not properly installed, the timer will display "--" and the motor will be disabled.


- 1 Plug in motor base and place on a clean, dry, level surface such as a countertop or table.



- 2 Add ingredients to the XL bowl. **DO NOT** add liquid past the **LIQUID FILL** line or ingredients past the **MAX FILL** line.



- 3 Place the Hybrid Edge™ Blades Assembly on the top of the bowl and turn clockwise to seal.

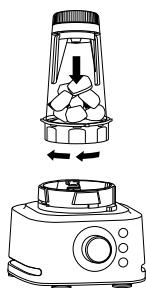

- 4 Turn the XL bowl upside down and install on motor base by aligning the tabs on the bowl with the slots on the base. Then, rotate bowl clockwise until it clicks. Once locked in place, press the Power button to turn unit on. The available program buttons will illuminate and the unit will be ready for use.




**NOTE:** While processing, twist the built-in tamper *counterclockwise* continuously.

- 5a If using an Auto-iQ program, use the dial select the program that best suits your desired output, then press START/STOP. During the blending process, ensure to twist the built-in tamper **counterclockwise** continuously. The preset feature will automatically stop at the end of the program. To stop the unit at any time, press START/STOP.

- 5b For Manual mode, press IQ/MANUAL. With speed 10 on the display, press START/STOP. During the blending process, twist the built-in tamper **counterclockwise** continuously. Once the ingredients have reached your desired consistency, press START/STOP and wait for the unit to come to a complete stop.

**NOTE:** Only speed 10 is available when using the XL bowl.

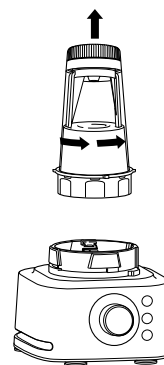


- 6 Remove the XL bowl from the motor base by turning it counterclockwise and then lifting it up.



- 7 Remove the blade assembly by twisting counterclockwise. **DO NOT** store blended contents with the blade assembly attached. Only use the spout lid or storage lid to cover. Exercise care when handling the blade assembly, as the blades are sharp.



- 8 To enjoy on the go, place the spout lid or storage lid onto the bowl and twist lid clockwise until firmly sealed.

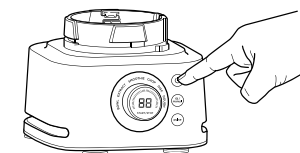

- 9 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

# USING THE NUTRIENT EXTRACTION\* CUP

 
**IMPORTANT:** Review all warnings on pages 4-7 before proceeding.

**NOTE:** If the unit is plugged in and powered on, but the cup and blade assembly is not properly installed, the timer will display “- -” and the motor will be disabled.


- 1 Plug in motor base and place on a clean, dry, level surface such as a countertop or table.




- 2 Add liquid then ingredients to the single-serve cup. **DO NOT** add ingredients past the **MAX LIQUID** line.



- 3 Place the Hybrid Edge™ Blades Assembly on the top of the cup and turn clockwise to seal.

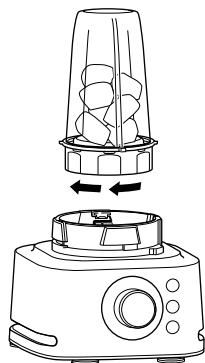


- 4 Turn the cup upside down and install on the motor base by aligning the tab on the cup with the slots on the base. Then, rotate cup clockwise until it clicks. Once locked in place, press the Power button to turn unit on. The available program buttons will illuminate and the unit will be ready for use.

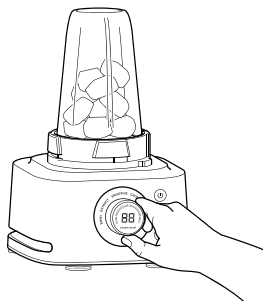


- 5a If using an Auto-iQ program, use the dial to select the program that best suits your desired output, then press START/STOP. The preset feature will automatically stop at the end of the program. To stop the unit at any time, press START/STOP.
- 5b For Manual mode, press IQ/MANUAL. With speed 10 on the display, press START/STOP. Once the ingredients have reached your desired consistency, press START/STOP and wait for the unit to come to a complete stop.


**NOTE:** Only speed 10 is available when using the single-serve cup.

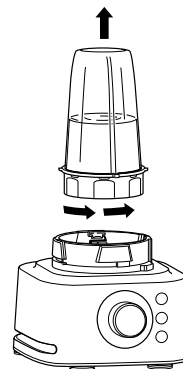

 
- 6 Remove the cup from the motor base by turning it counterclockwise and then lifting up.



 - 7 Remove the blade assembly by twisting counterclockwise. **DO NOT** store blended contents with the blade assembly attached. Only use the spout lid or storage lid to cover. Exercise care when handling the blade assembly, as the blades are sharp.



- 8 To enjoy on the go, place the spout lid or storage lid onto the cup and twist lid clockwise until firmly sealed.

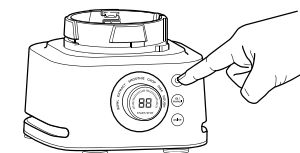

- 9 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

\*Extract a drink containing vitamins and nutrients from fruits and vegetables.

# CARE & MAINTENANCE

## USING THE BLENDER FOR STUCK-ON INGREDIENTS

**NOTE:** For best results, use a dishwasher to remove stuck-on ingredients.

- 1 After processing, immediately clean the container and blade assembly under warm, soapy water.
- 2 Depending on the container, fill with soap and water according to the following instructions:

### 72-ounce Pitcher & Flat Lid:

1 OR 2 SMALL DROPS OF DISH SOAP

FILL WATER TO DOUGH MAX LINE



With the dough or stacked blade assembly installed, fill with warm water up to DOUGH MAX line and add 1 or 2 small drops dish soap. Secure flat lid, and ensure the pour spout is securely closed.

### XL Bowl:

1 OR 2 SMALL DROPS OF DISH SOAP

FILL WATER TO TOP OF BUILT-IN TAMPER



Fill with warm water up to top of built-in tamper and add 1 or 2 small drops dish soap. Install blade assembly.

**NOTE:** If using the XL bowl, twist the built-in tamper counterclockwise *continuously* while cleaning.

### Single-Serve Cup:

1 SMALL DROP OF DISH SOAP

FILL WATER HALFWAY



Fill halfway with warm water and add 1 small drop dish soap. Install blade assembly.

- 3 Install the container on the motor base. Select BOWL, then press START/STOP.
- 4 Once program is complete, thoroughly rinse container and blade assembly under warm, soapy water.

## CLEANING

### Hand-Washing

Wash containers, lids, discs, and blade assemblies in warm, soapy water. Use a dishwashing utensil with handle to avoid direct contact with the blades. Exercise care when handling the blade assembly as the blades are sharp. Thoroughly rinse and air-dry all parts.

**NOTE:** The built-in tamper in the XL bowl is not removable.

### Dishwasher

Containers, lids, discs and blade assemblies are dishwasher safe. Ensure the blade assembly and lid are removed from the container before placing in the dishwasher.


**NOTE:** For best results, use a dishwasher to remove stuck-on ingredients.

### Motor Base

Unplug the motor base before cleaning. Wipe motor base with a clean, damp cloth. **DO NOT** use abrasive cloths, pads, or brushes to clean the base.

### STORING

To purchase a storage case to house most attachments that come with this unit, visit [ninjaccessories.com](http://ninjaccessories.com).

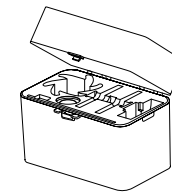

Store the Hybrid Edge™ Blades Assembly with the single-serve cup and the storage lid with the XL bowl.

For cord storage, wrap cord with hook-and-loop fastener near the back of the motor base. **DO NOT** wrap the cord around the bottom of the base for storage.

**DO NOT** store blended or unblended ingredients in the cup or XL Bowl with the blade assembly attached.

**DO NOT** stack items on top of the containers. Store any remaining attachments alongside the unit or in a cabinet where they will not be damaged or create a hazard.

## RESETTING THE MOTOR

This unit features a unique safety system that prevents damage to the motor and drive system should you inadvertently overload it. If the unit is overloaded, the motor will be temporarily disabled. Should this occur, follow the reset procedure below.

- 1 Unplug the unit from the electrical outlet.
- 2 Allow the unit to cool for approximately 15 minutes.
- 3 Remove the container's lid and blade assembly. Empty the container and ensure no ingredients are jamming the blade assembly.

**IMPORTANT:** Ensure that maximum capacities are not exceeded. This is the most typical cause of appliance overload.

If your unit needs servicing, please call Customer Service at 1-877-646-5288. So we may better assist you, please register your product online at [registeryourninja.com](http://registeryourninja.com) and have the product on hand when you call.

### ORDERING REPLACEMENT PARTS

To order additional parts and attachments, visit [ninjaccessories.com](http://ninjaccessories.com).

# TROUBLESHOOTING GUIDE

**⚠ WARNING: To reduce the risk of shock and unintended operation, turn power off and unplug unit before troubleshooting.**

## Display reads “- -”.

- If the display reads “- -”, install a container and the available program buttons will illuminate, indicating the unit is ready for use. Ensure the lid is fully engaged and the container has been rotated clockwise and clicked to lock into place.
- If vessel is properly installed and the display reads “- -”, ensure the interior of the base area is clean of any debris.

## Display reads “E1”.

- If the display reads “E1”, unplug the unit from the electrical outlet and allow it to cool for 15 minutes. Remove the blade assembly and empty the contents to ensure no ingredients are jamming the blade assembly.

## Display reads “E2”.

- If the display reads “E2” unplug the unit from the electrical outlet and allow it to cool for 5 minutes. Remove the blade assembly and empty the contents to ensure no ingredients are jamming the blade assembly. If output is too thick and ingredients are not processing properly, add more liquid.

## Blade speed sometimes changes when blending thinner ingredients.

- When using speed 9 or 10 with the pitcher, you may notice a change in the blade speed when blending thinner ingredients. This is due to the smart technology in the blender and is part of the unit’s normal operation.

## Unit doesn’t mix well; ingredients get stuck.

- Using the Auto-iQ® programs is the easiest way to achieve great results. The pulses and pauses allow the ingredients to settle toward the blade assembly. If ingredients are routinely getting stuck, adding some liquid will usually help.
- When filling the cup, start with fresh fruit or veggies, then leafy greens or herbs. Next add liquids or yogurt, then seeds, powders, or nut butters. Finally, add ice or frozen ingredients.
- If using the XL bowl, during the blending process twist the built-in tamper counterclockwise continuously to circulate ingredients.

## Unit moves on counter while blending.

- Make sure the surface and feet of the unit are clean and dry.

## Preset program will not work.

- The unit can detect which container is on the motor base. You may be trying to use a program that is not designed for the container or lid you have installed. The programs will light up, indicating which programs are available for each container.

## Food is not evenly chopped.

- For best results when chopping, cut pieces of ingredients in a uniform size and don’t overfill the Pitcher. Refer to the Quick Start Guide or Inspiration Guide for food prep instructions.

## Can’t remove the built-in tamper from the XL bowl.

- The built-in tamper in the XL bowl is not removable. For cleaning instructions, refer to the Care & Maintenance section.

## All ten speed ranges are not available when using the XL bowl, the single-serve cup, or the feed chute lid and disc assemblies.

- Only speed 10 is available when using the XL bowl or single-serve cup, and only speed 1 is available when using feed chute lid and disc assemblies.
- All 10 speed ranges are available when using the pitcher and stacked blade assembly.  
**IMPORTANT:** Only use speed 1 when using the dough blade assembly.

## Cannot install feed chute lid onto pitcher.

- Thoroughly wash the handle of the pitcher with soap and water where the lid connects to the pitcher.
- Check to ensure the desired disc is fully seated on the disc spindle.

## Ingredients are unevenly sliced.

- For best results when using the reversible slicing/shredding disc, trim ingredients to a uniform size so they fit better through the feed chute. Do not cut ingredients smaller than the feed chute height. **DO NOT** attempt to force ingredients through the feed chute.

# Shark NINJA

## ONE (1) YEAR LIMITED WARRANTY

The One (1) Year Limited Warranty applies to purchases made from authorized retailers of **SharkNinja Operating LLC**. Warranty coverage applies to the original owner and to the original product only and is not transferable.

SharkNinja warrants that the unit shall be free from defects in material and workmanship for a period of one (1) year from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner’s Guide, subject to the following conditions and exclusions:

### What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in SharkNinja’s sole discretion, will be repaired or replaced up to one (1) year from the original purchase date.
2. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.

### What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as blending vessels, lids, blades, blender bases, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at [ninjaaccessories.com](http://ninjaaccessories.com).
2. Any unit that has been tampered with or used for commercial purposes
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by SharkNinja. These defects include damages caused in the process of shipping, altering, or repairing the SharkNinja product (or any of its parts) when the repair is performed by a repair person not authorized by SharkNinja.
6. Products purchased, used, or operated outside North America.

### How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit [ninjakitchen.com/support](http://ninjakitchen.com/support) for product care and maintenance self-help. Our Customer Service Specialists are also available at **1-877-646-5288** to assist with product support and warranty service options, including the possibility of upgrading to our VIP warranty service options for select product categories. So we may better assist you, please register your product online at [registryourninja.com](http://registryourninja.com) and have the product on hand when you call.

SharkNinja will cover the cost for the customer to send in the unit to us for repair or replacement. A fee of \$20.95 (subject to change) will be charged when SharkNinja ships the repaired or replacement unit.

### How to initiate a warranty claim

You must call **1-877-646-5288** to initiate a warranty claim. You will need the receipt as proof of purchase. We also ask that you register your product online at [registryourninja.com](http://registryourninja.com) and have the product on hand when you call, so we may better assist you. A Customer Service Specialist will provide you with return and packing instruction information.

### How state law applies

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

# NOTES

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

# NOTES

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

**SharkNinja Operating LLC**  
**US: Needham, MA 02494**  
**CAN: Ville St-Laurent, QC H4S 1A7**  
**1-877-646-5288**  
**ninjakitchen.com**

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

AUTO-IQ, FOODI, NINJA, and TOTAL CRUSHING are registered trademarks of SharkNinja Operating LLC.

HYBRID EDGE is a trademark of SharkNinja Operating LLC.

This product may be covered by one or more U.S. patents.  
See [sharkninja.com/patents](https://sharkninja.com/patents) for more information.

© 2022 SharkNinja Operating LLC

CO401B\_IB\_MP\_Mv1



**@ninjakitchen**