

Please make sure to read the enclosed Ninja Owner's Guide prior to using your unit.

NINJA®


NUTRI NINJA® | NINJA BLENDMAX DUO™ WITH AUTO-IQ BOOST™

QUICK ASSEMBLY

NUTRI NINJA® CUPS



1. Screw on the blade assembly clockwise until you have a tight seal.



2. Turn cup upside down and lower it onto the base.



3. Turn cup clockwise to lock in place.




WARNING: Handle the Pro Extractor Blades® Assembly with care, as the blades are sharp.


PITCHER



1. Place pitcher on base and turn clockwise to lock in place.

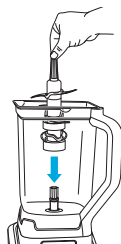

2. Holding the Stacked Blade Assembly by the top of the shaft, insert it into the pitcher, onto the drive gear.

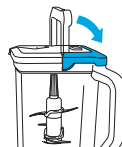

3. Align arrows on lid and handle, then lower handle to lock in place.



WARNING: Stacked Blade Assembly is sharp and not locked in place. Make sure lid is locked onto pitcher before pouring. If pouring without lid, carefully remove blade assembly first. Failure to do so will result in a risk of laceration. Refer to the Ninja Owner's Guide for additional information.

SEE REVERSE SIDE TO LEARN MORE ABOUT AUTO-IQ BOOST™.

QUESTIONS? We're here to help. Call 1-877-646-5288 or visit ninjakitchen.com

Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.

AUTO-IQ BOOST™

Auto-iQ Boost gives you the perfect consistency for everything from smoothies and juices to sauces and dips. Here's how to get the best results with each program on your Nutri Ninja® | Ninja® BlendMax DUO™. (Certain Auto-iQ™ programs are compatible with each container. You are only able to select programs that are illuminated.)

HOW BOOST WORKS

BOOST defaults to YES. Toggle between YES and NO to customize the consistency of your recipe.

BOOST YES:

Use BOOST YES for the finest breakdown or the most even consistency in all recipes.

BOOST NO:

Use BOOST NO for more thickness or texture in all recipes.

SMOOTHIE



Fresh/Frozen Fruits
Milks/Yogurts
Protein Shakes

Auto-iQ BOOST



Auto-iQ BOOST will always default to YES. For BOOST NO, press Auto-iQ BOOST, until NO is illuminated.

PUREE



Sauces
Dips
Soups

FROZEN DRINK



Margaritas
Daiquiris
Milkshakes

EXTRACT



Leafy Greens
Fibrous Ingredients
Seeds

TOTAL CRUSH



Snow Cones
Sorbets/Icy Treats
Fine Veggie Chop

LOW, MED, and HIGH are manual programs that run continuously. They do not work in conjunction with any Auto-iQ programs.

CLEANING

Dishwasher: The containers, lids, and blade assemblies are all dishwasher safe. The lids and blade assemblies are top-rack dishwasher safe. Ensure the blade assemblies are removed from the containers before placing in the dishwasher.

Hand washing: Wash containers, lids, and blade assemblies in warm, soapy water. When washing the blade assemblies, use a dishwashing utensil with a handle to avoid direct hand contact with blades. Handle blade assemblies with care to avoid contact with sharp edges. Rinse and air-dry thoroughly.



WARNING: Handle the blade assemblies with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.

QUESTIONS? We're here to help. Call **1-877-646-5288** or visit **ninjakitchen.com**